ORDER NO.HAD8804128C8

Service Manual

Tuner

QUARTZ Synthesizer
LW/MW/FM Stereo Tuner

ST-X990L

Color

(K).....Black Type

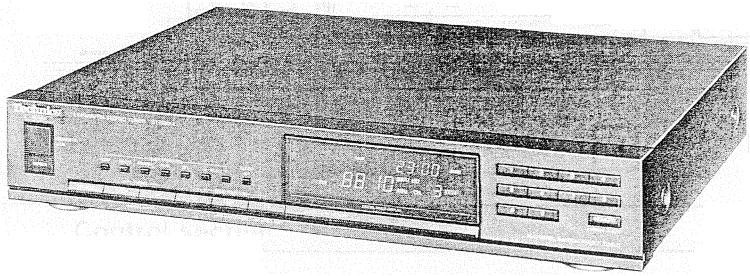

Area

Color	Area
(K)	(E) .....Continental Europe.
(K)	(EH) .....Holland.
(K)	(EB) .....Belgium.
(K)	(EF) .....France.
(K)	(EK) .....United Kingdom.
(K)	(XA) .....Asia,Latin America, Middle Near East, Africa & Oceania.

SPECIFICATIONS

(DIN 45 500)

■ FM TUNER SECTION

Frequency range	87.50 ~ 108.00 MHz (50 kHz-steps)
Sensitivity	1.5 µV (IHF, usable)
S/N 30 dB	1.3 µV (75Ω)
S/N 26 dB	1.2 µV (75Ω)
S/N 20 dB	0.9 µV (75Ω)
IHF 46 dB stereo quieting sensitivity	28 µV / 75Ω
Total harmonic distortion	
MONO	0.15%
STEREO	0.3%
S/N	
MONO	70 dB (78 dB,IHF)
STEREO	65 dB (71 dB,IHF)
Frequency response	20 Hz ~ 15 kHz, +0.5 dB ~ -1.5 dB
Alternate channel selectivity	
±400 kHz	65 dB
Capture ratio	1.0 dB
Image rejection at 98 MHz	46 dB
IF rejection at 98 MHz	70 dB
Spurious response rejection at 98 MHz	70 dB
AM suppression	55 dB
Stereo separation	
1 kHz	40 dB
10 kHz	30 dB
Carrier leak	
19 kHz	-30 dB (-35 dB,IHF)
38 kHz	-45 dB (-50 dB,IHF)
Channel balance (250 Hz ~ 6,300 Hz)	± 1.5 dB
Limiting point	1.2 µV
Bandwidth	
IF amplifier	180 kHz
FM demodulator	1000 kHz
Antenna terminals	75Ω (unbalanced)

■ AM TUNER SECTION

Frequency range	
MW	522 kHz ~ 1611 kHz (9 kHz-steps)
	530 kHz ~ 1620 kHz (10 kHz-steps)
LW	155 kHz ~ 353 kHz (9 kHz-steps)
	153 kHz ~ 351 kHz (-2 kHz shift)
Sensitivity (S/N 20 dB)	
MW	20 µV,300 µV/m
LW	50 µV
Selectivity (± 9 kHz)	
MW (at 999 kHz)	55 dB
LW (at 254 kHz)	55 dB
Image rejection	
MW (at 999 kHz)	40 dB
LW (at 254 kHz)	40 dB
IF rejection	
MW (at 999 kHz)	60 dB
LW (at 254 kHz)	60 dB

■ TIMER SECTION

Clock	Quarz-lock type 24-hour indication
Precision	Within 0 sec.~±10 sec. monthly(at 25 °C)
Functions	24-hour programmable weekly (1 time) once only (1 time) sleep (at 10~60 min)
Programmable content	Program source(FM,MW,LW) Power ON/OFF timing Designation of preset station
Setting intervals	1 minute ~23 hours,59 minutes (at 1-min.intervals)
Priority order	sleep, once, weekly

■ GENERAL

Output voltage	0.3V (0.6V,IHF)
Power consumption	9W(clock 5W)
Power supply	
For United Kingdom	AC 50 Hz/60 Hz,240V
For continental Europe	AC 50 Hz/60 Hz,220V
For others	AC 50 Hz/60 Hz,110V/127V/220V/240V
Dimensions (W x H x D)	360 x 64.5 x 288 mm (14-3/16" x 2-17/32" x 11-11/32")
Weight	2.1 kg (4.6 lb.)

Notes:
1.Specifications are subject to change without notice. Weight and dimensions are approximate.
2.Total harmonic distortion is measured by the digital spectrum analyzer (H.P. 3045 system).

Technics

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan

ST-X990L

■ CONTENTS

	Page
CONNECTIONS	2
LOCATION OF CONTROLS	3,4
REMOTE CONTROL TRANSMITTER	5
DISASSEMBLY INSTRUCTIONS	6,7
ACCESSORIES	7
TERMINAL GUID OF IC'S,TRANSISTORS AND DIODES	8
CIRCUITBOARDS AND WIRING CONNECTION DIAGRAM	9,10
DESCRIPTION OF FL PANEL	11
SCHEMATIC DIAGRAM	12~15
FUNCTIONS OF IC TERMINALS	16
BLOCK DIAGRAM	17,18
MEASUREMENTS AND ADJUSTMENTS	19,20
REPLACEMENT PARTS LIST	21,23,24
EXPLODED VIEW	22
RESISTORS AND CAPACITORS	25,26

■ CONNECTIONS

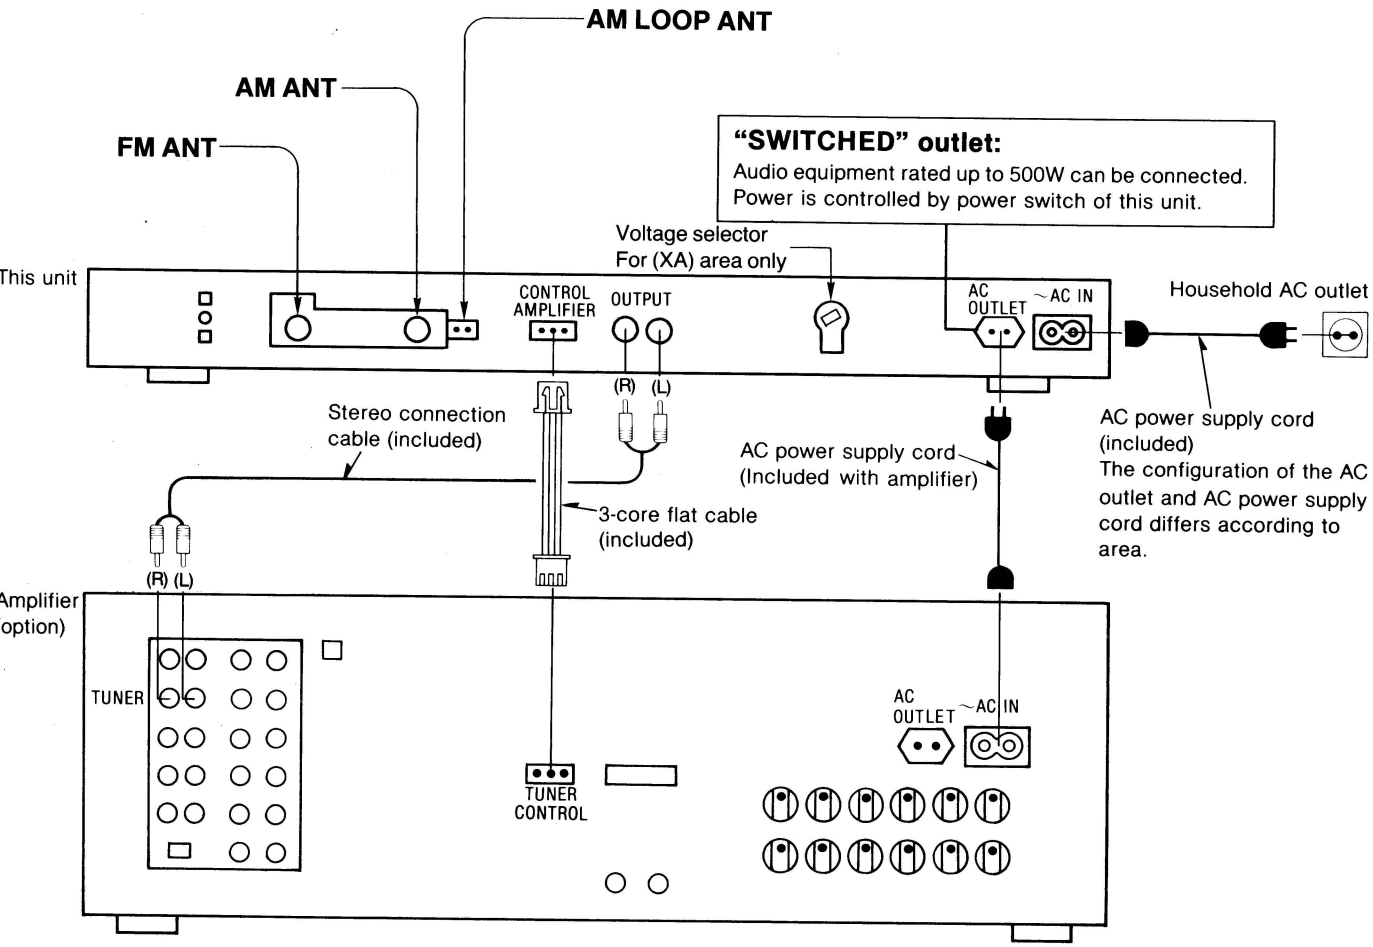

ST-X990L

■ LOCATION OF CONTROLS

The indication AM used here includes both MW and LW.

Tuner section

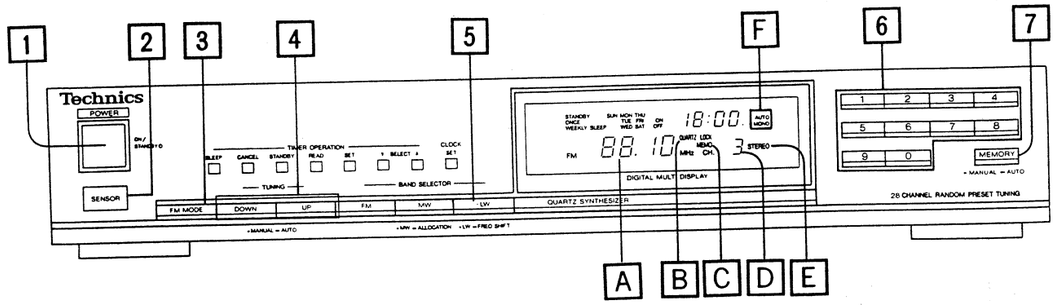

Control section

[1] Power "STANDBY ⏻/ON" switch (POWER "ON/STANDBY ⏻")

This switch switches ON and OFF the secondary circuit power only. The unit is in the "STANDBY" condition when this switch is set to the "STANDBY ⏻ " position. Regardless of the switch setting, the primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

[2] Remote-control signal receptor (SENSOR)

[3] FM mode selector (FM MODE)

This unit automatically switches to the stereo mode when a stereo broadcast is received. Press this selector to listen in the monaural mode. The FM stereo indicator will not illuminate in the monaural mode.

[4] Tuning buttons (TUNING)

If the button is pressed momentarily and then released, the frequency will change at intervals of 0.05 MHz for FM and 9 kHz (or 10 kHz) for AM.

[5] Band selectors (BAND SELECTOR)

FM: Press this button to listen to an FM broadcast.
MW: Press this button to listen to an MW broadcast.
ALLOCATION: When the MW button is pressed for about 3 seconds, the MW frequency step will change to 10 kHz per step. (This step is set to 9 kHz before shipment.) In order to return to the original frequency indication, press this button for about 3 seconds again.
LW: Press this button to listen to an LW broadcast.
FREQ SHIFT: When the LW button is pressed for about 3 seconds during reception of an LW broadcast, the LW frequency will decrease by 2 kHz. In order to return to the original frequency indication, press this button for about 3 seconds again.

[6] Preset-tuning buttons (1 ~ 0) (28 CHANNEL RANDOM PRESET TUNING)

These buttons are used to preset FM and AM broadcast frequencies into the memory of this unit, and are also pressed to select the desired preset frequencies.

[7] Memory button (MEMORY)

Display section

[A] Digital frequency display

[B] Quartz-lock indicator (QUARTZ LOCK)

This indicator illuminates when tuned precisely to an FM or AM station.

[C] Memory indicator (MEMO)

[D] Channel display

[E] FM stereo indicator (STEREO)

This indicator automatically illuminates when an FM stereo broadcast is being received.
Note:
It will not illuminate if the FM mode selector is set to the monaural mode.

[F] FM mode indicators

When FM broadcasts are being received, usually the "AUTO" indication is illuminated.
When the FM mode selector is used to select monaural reception, the word "MONO" illuminates.

Timer section

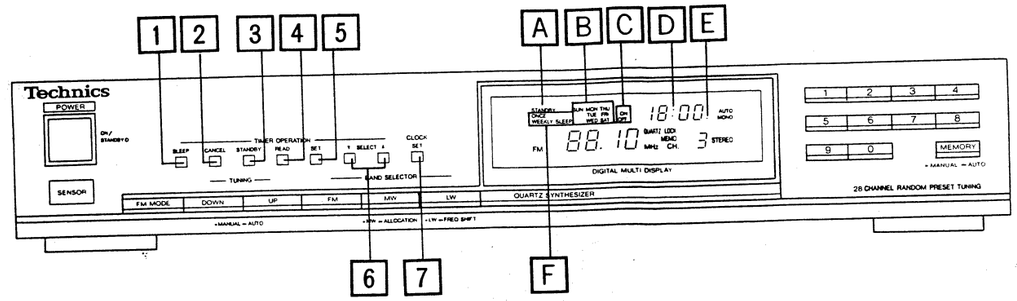

Control section

[1] Sleep timer set button (SLEEP)

This button can be used to set the time at which the power will be switched OFF.

[2] Timer-mode-cancel button (CANCEL)

This button can be used to erase the timer setting or to cancel a setting that is being made, if, for example, you decide to do something else.

[3] Timer-set temporary cancel button (STANDBY)

This button can be used to temporarily cancel the timer setting.

[4] Programming-check button (READ)

This button can be used to check the programmed setting.

[5] Program-set button (SET)

This button can be used, when making the timer setting, to select the type of timer operation, the day, the time, etc.

[6] Timer-mode/time-set buttons (SELECT)

These buttons can be used, when setting the present time, as well as for setting the day, time, etc. of the timer setting.

[7] Time-set button (CLOCK SET)

This button is used when setting the present time and when setting the day, time, etc.

Display section

[A] Timer standby indicator (STANDBY)

This indicator shows that the timer has been set to operate at the programmed time.

[B] Day indicator

This indicator shows the present day, and (if the timer has been set) the day it has been set for.

[C] Timer ON/OFF indicator (ON/OFF)

This indicator shows that the times for timer switch-ON and switch-OFF have been set.

[D] Time indicator

This indicator shows the present time, and (if the timer has been set) the time it has been set for.

[E] Colon indicator

This indicator shows, by flashing continuously, that the clock is operating.

[F] Timer-mode indicator (ONCE/WEEKLY/SLEEP)

This indicator shows the type of timer operation that has been selected.

●REMOTE CONTROL TRANSMITTER (EUR64754)

For detailed information concerning operation steps, etc., please refer to the appropriate page for each unit and the respective operation instructions. For this system, you can listen to the tapes or compact discs, etc. by operating the remote-control transmitter without pressing the amplifier's input selector.

Note: The control panel of the remote-control transmitter may be covered by a clear plastic protective sheet. This sheet may be removed if desired.

Before beginning

"ON"
(The frequency will be displayed on the digital frequency display.)

Note that there is no need to press this button if the tuner's power is ON. (If it is pressed, the tuner will be switched to standby mode.)

While listening to music

Press this button to temporarily reduce the volume level. The volume level is attenuated by 20 dB. (approx. 1/10) Press once again to return to the previous volume level.

Adjust the volume level.

Listening to phono discs

START — Press to start the play.

TURNTABLE ■STOP — Press to stop the play.

Listening to radio broadcasts

1 – 0

Press to listen to the desired preset "channel".

Listening to compact discs

►PLAY/ ❚❚PAUSE — Press to start the play.

►PLAY/ ❚❚PAUSE — Press to temporarily stop the play. Press once again to resume the play.

CD ■STOP — Press to stop the play.

To search for a certain track (skip play)

SKIP/–SEARCH ⏮ — Press momentarily to search for the track now playing. Repeat this step the necessary number of times to search for a previous track.

SKIP/+SEARCH ⏭ — Press momentarily to search for the next track.

To search for a desired position (search play)

SKIP/–SEARCH ⏮ — To move backward quickly on the disc, press and hold, and then release at the desired position.

SKIP/+SEARCH ⏭ — To move forward quickly on the disc, press and hold, and then release at the desired position.

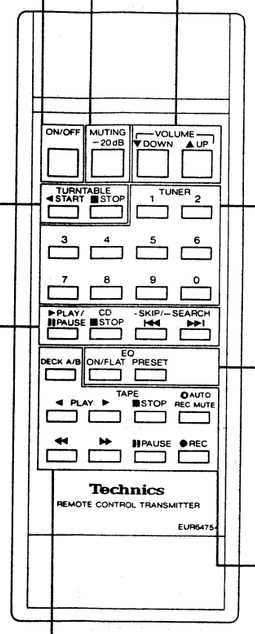

To listen to sound corrected by an euqalizer

ON/FLAT — Press to switch the equalizer correction ON. Press once again to switch it OFF.

PRESET — Press to retrive the memorized curve. (For Technics graphic equalizer with the preset memory function only.)

Recording

Note: For Technics tape decks (RS-X950, RS-X980, etc.), "DECK B" has no record capability.

1 DECK A/B — Press to select the deck ("DECK A" or "DECK B") operated

2 ●REC — Press. (Recording stand-by mode)

3 Begin the sound source.

4 ◄ PLAY ► PLAY ► — Press to select the tape side for recording. (Recording will begin.)

TAPE ■STOP — Press to stop the recording.

❚❚PAUSE — Press to temporarily stop recording. To begin recording once again, press the playback button.

AUTO REC MUTE — Press to make an un recorded space

(After 4 seconds, the tape deck will automatically change to the recording stand-by mode.)
To start the recording again, press the playback button .

Listening to tapes

1 DECK A/B — Press to select the deck ("DECK A" or "DECK B") operated.

2 ◄ PLAY ► PLAY ► — ►:For foward side ◄:For reverse side
Press to select the tape side for playing back. (Playback will start.)

TAPE ■STOP — Press to stop the playback.

◄◄ ►► — Press to advance or rewind the tape.

Press to select the desired tune in the play mode
(For Technics tape deck with the "music select" functions only.)

❚❚PAUSE — Press to temporarily stop playback. Press the playback button to resume the play.

■ DISASSEMBLY INSTRUCTIONS

Ref. No. 1	How to remove the cabinet
Procedure 1	●Remove the 4 screws (❶~❹).

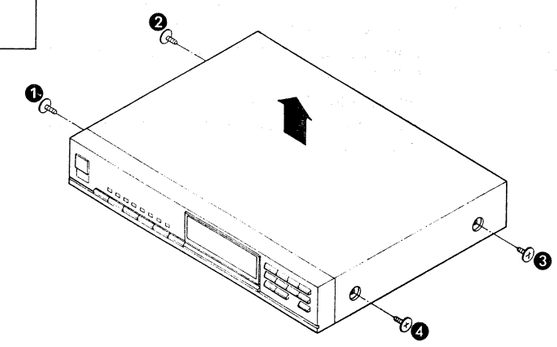

Ref. No. 2	How to remove the front panel
Procedure 1→2	1. Remove the flat cable (J901, J902). 2. Push the front panel in the direction of the arrow Ⓐ and remove the holder in the direction of the arrow Ⓑ. 3. Remove the 3 secrews (❶~❸). 4. Remove the front panel in the direction of the arrow.

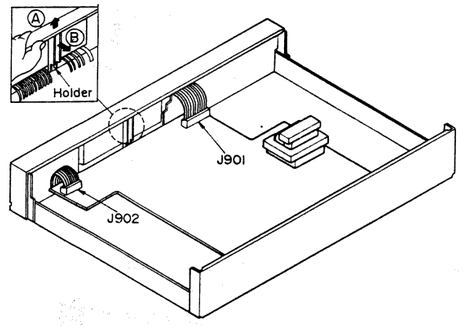

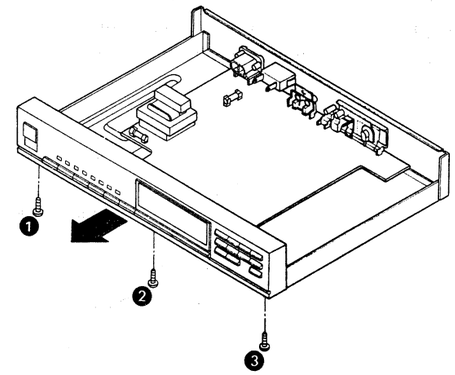

How to remove the flat cable

Pull out the flat cable while pressing the connector

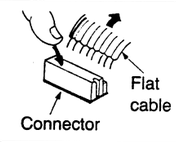

Ref. No. 3	How to remove the main P.C.B.
Procedure 1→3	1. Remove the 10 screws (❶~❿). 2. Remove the 3 screws (⓫~⓭). 3. Slightly pull the front panel toward you and remove the main P.C.B.

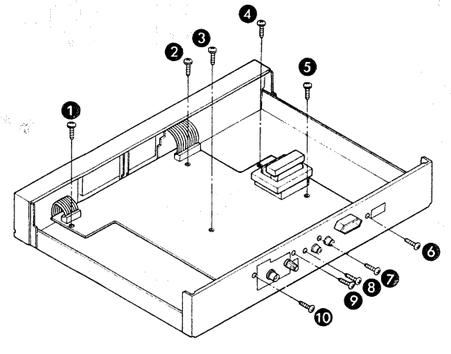

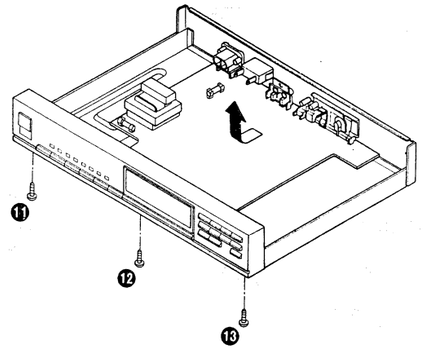

Ref. No. 4	How to remove the preset tuning SW P.C.B. and band/tuning/timer operation SW P.C.B.
Procedure 1→2→4	1. Remove the 4 screws (❶~❹). 2. Remove the band/tuning/timer operation SW P.C.B. 3. Remove the 1 screw (❺). 4. Push the 4 claws and remove the preset tuning SW P.C.B.

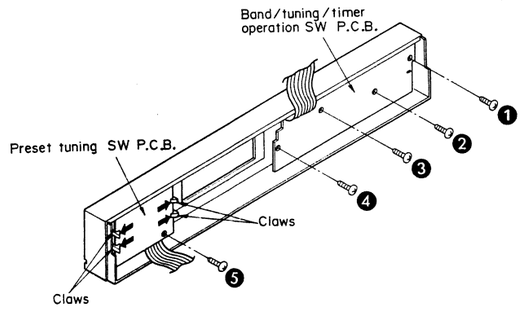

Ref. No. 5	How to remove the remote control
Procedure 5	1. Remove the battery cover lid. 2. Remove the one screw (❶). 3. Insert a screwdriver blade between the upper and lower covers inside the battery compartment and them slowly loosen the bottom cover.

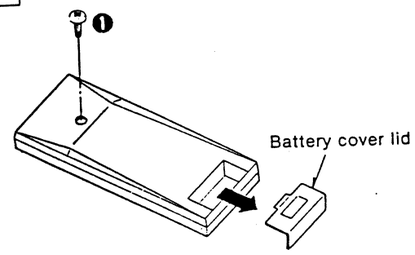

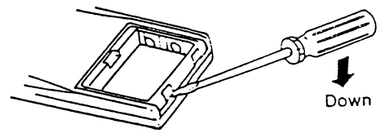

■ ACCESSORIES

- Remote-control transmitter (EUR64754) 1

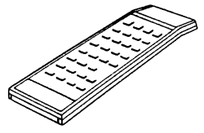

- Batteries 2
  (UM-4NE)



- 3-core flat cable 1
  (SWKTX930E)

- Stereo connection cable 1
  (SJPK2203-1)



- AC power supply cord 1
  (SJA168) For (XA) area only.
  (SFDAC05G02) For (EK) area only.
  (SFDAC05E03) For others.

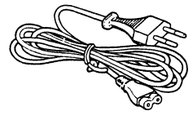

- FM indoor antenna 1
  (SSA269) For (XA) area only.
  (SSA270) For others.



- AM loop antenna 1
  (SPB1139-1)

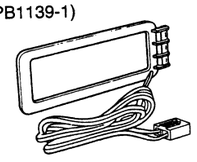

- AM antenna holders 2
  (SMA233-1M)



- Screws 2
  (XTN3+10AFZ)



Note: Configuration of AC power supply cord and FM indoor antenna differs according to area.

■ TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES

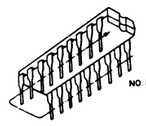

SVIUPC 1161C3	16 Pin
LM7001	16 Pin
AN7273B	18 Pin

2SK544F-AC



2SC3940A-Q
2SC2787L
2SC2786M
2SC1675L
2SC1685RST



2SC2603EFG
2SC1740SQ
2SA933SQR
2SD1450RS





UPD7519HG600	64 pin

ISR35200



MA165, MA162A
MA700A





MA4051M,
MA4062M,
MA4150M
MA4330L
MA4043M
MA4100M

SVC211SPA-AL

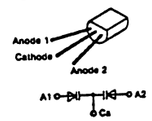

■ CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

A MAIN P.C.B.

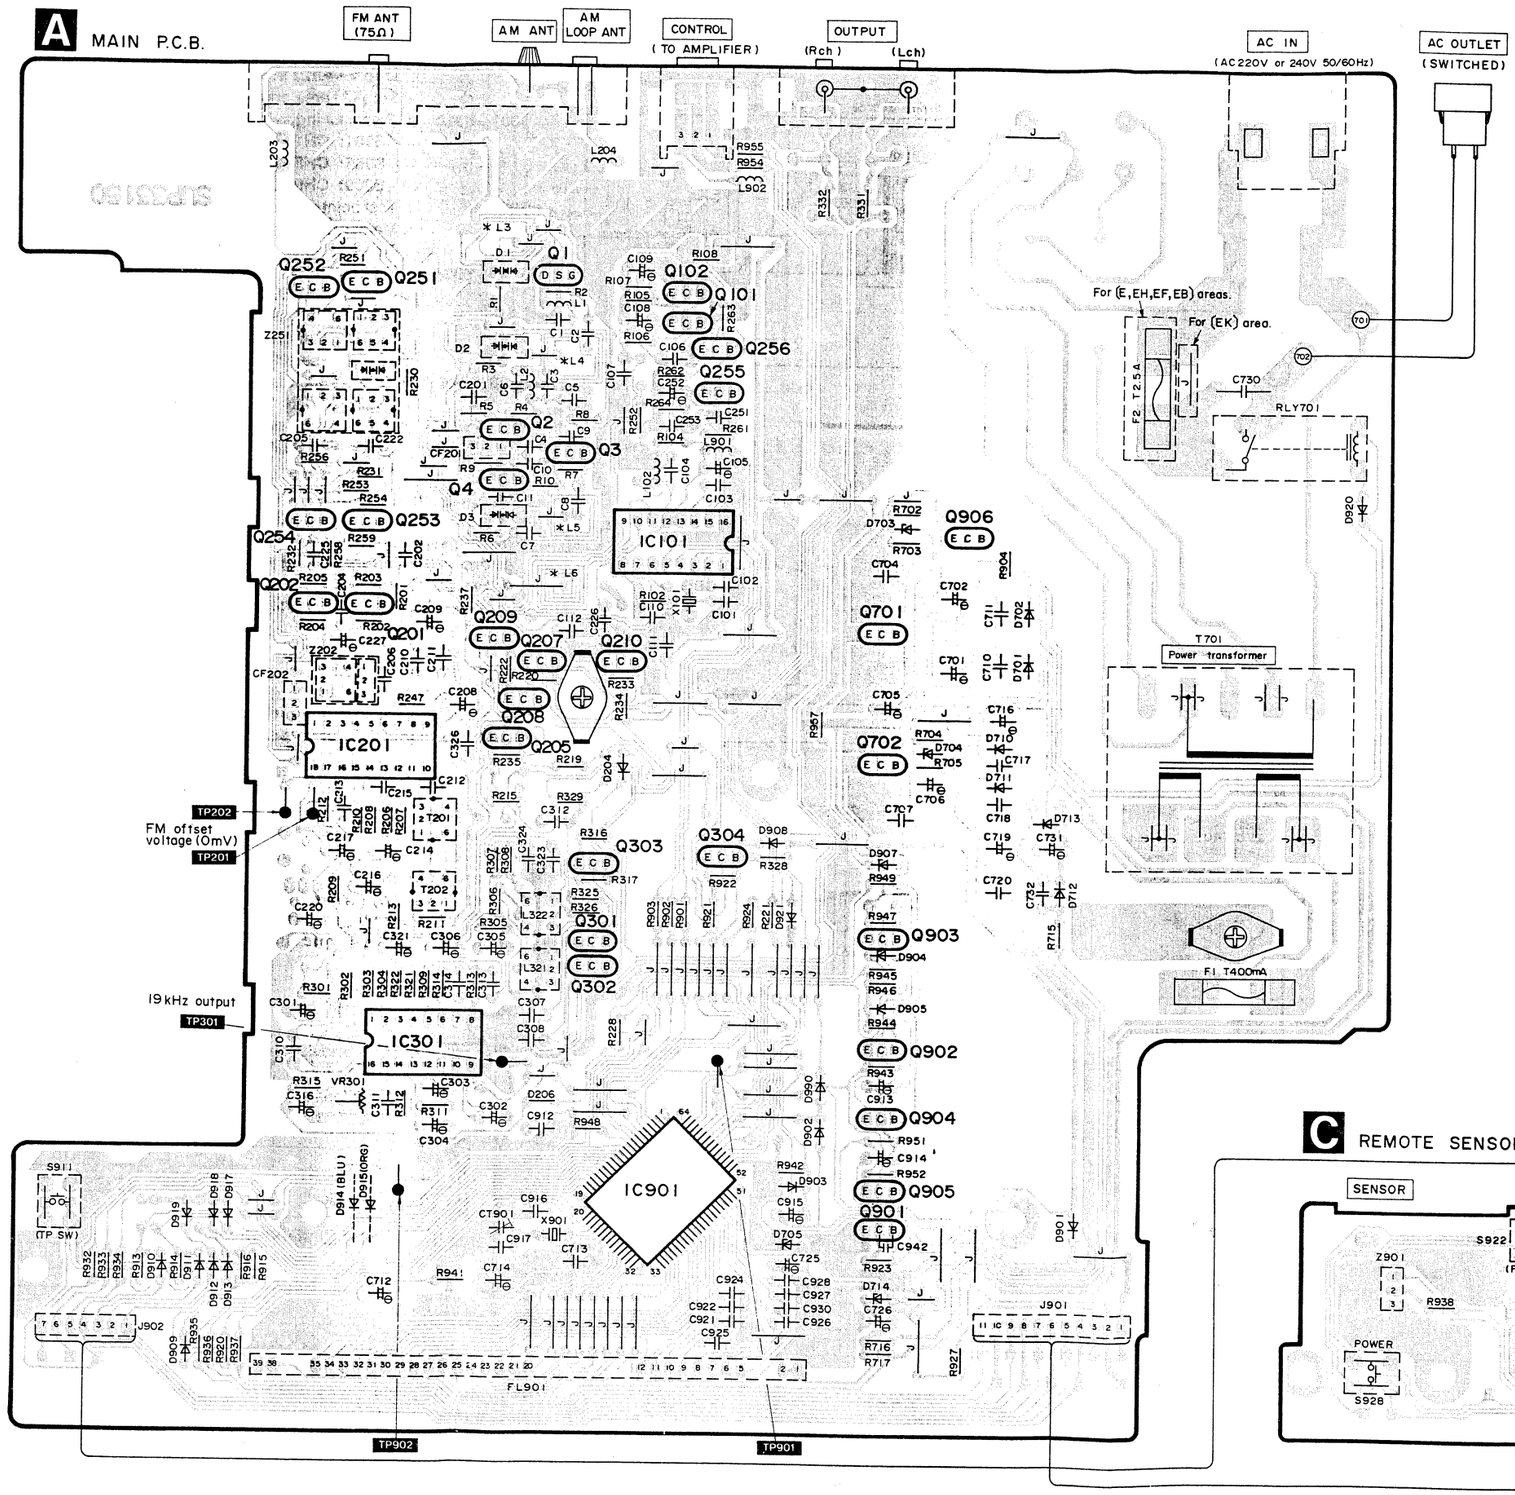

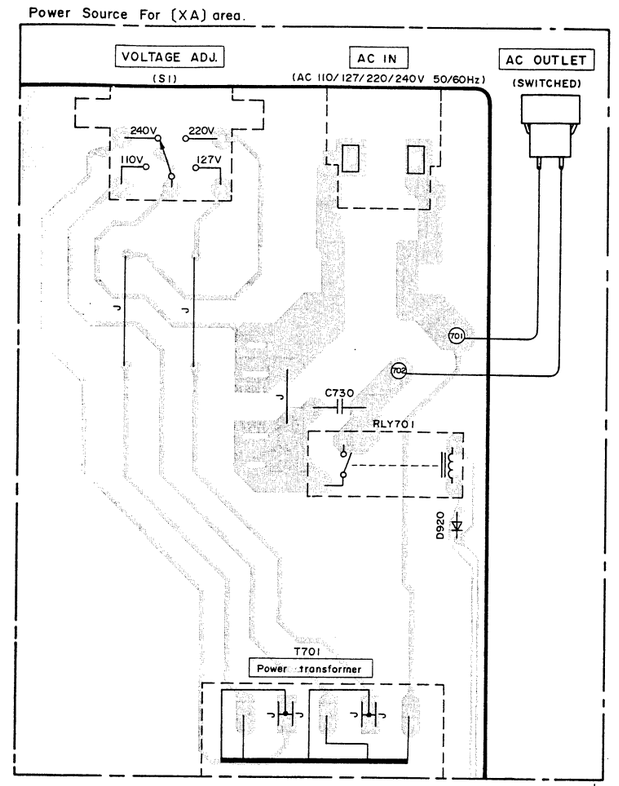

B SWITCH P.C.B.

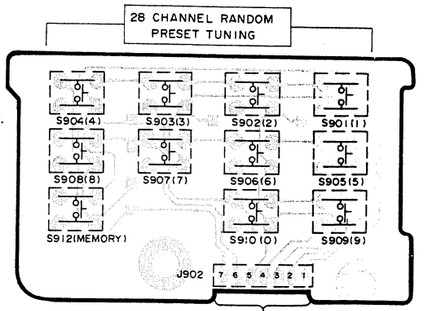

C REMOTE SENSOR / SWITCH P.C.B.

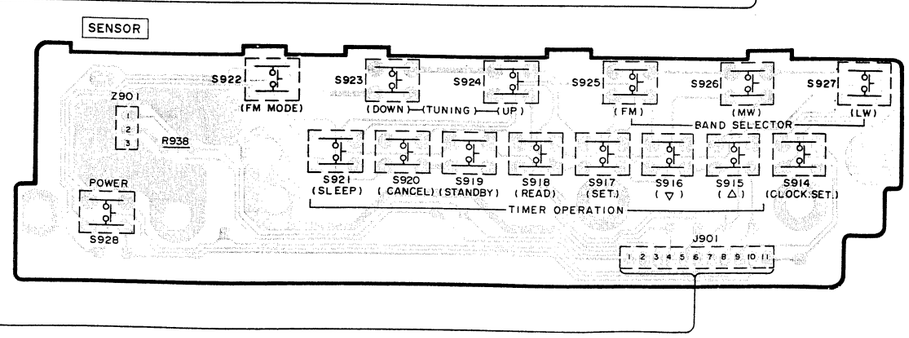

■ CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

A MAIN P.C.B.

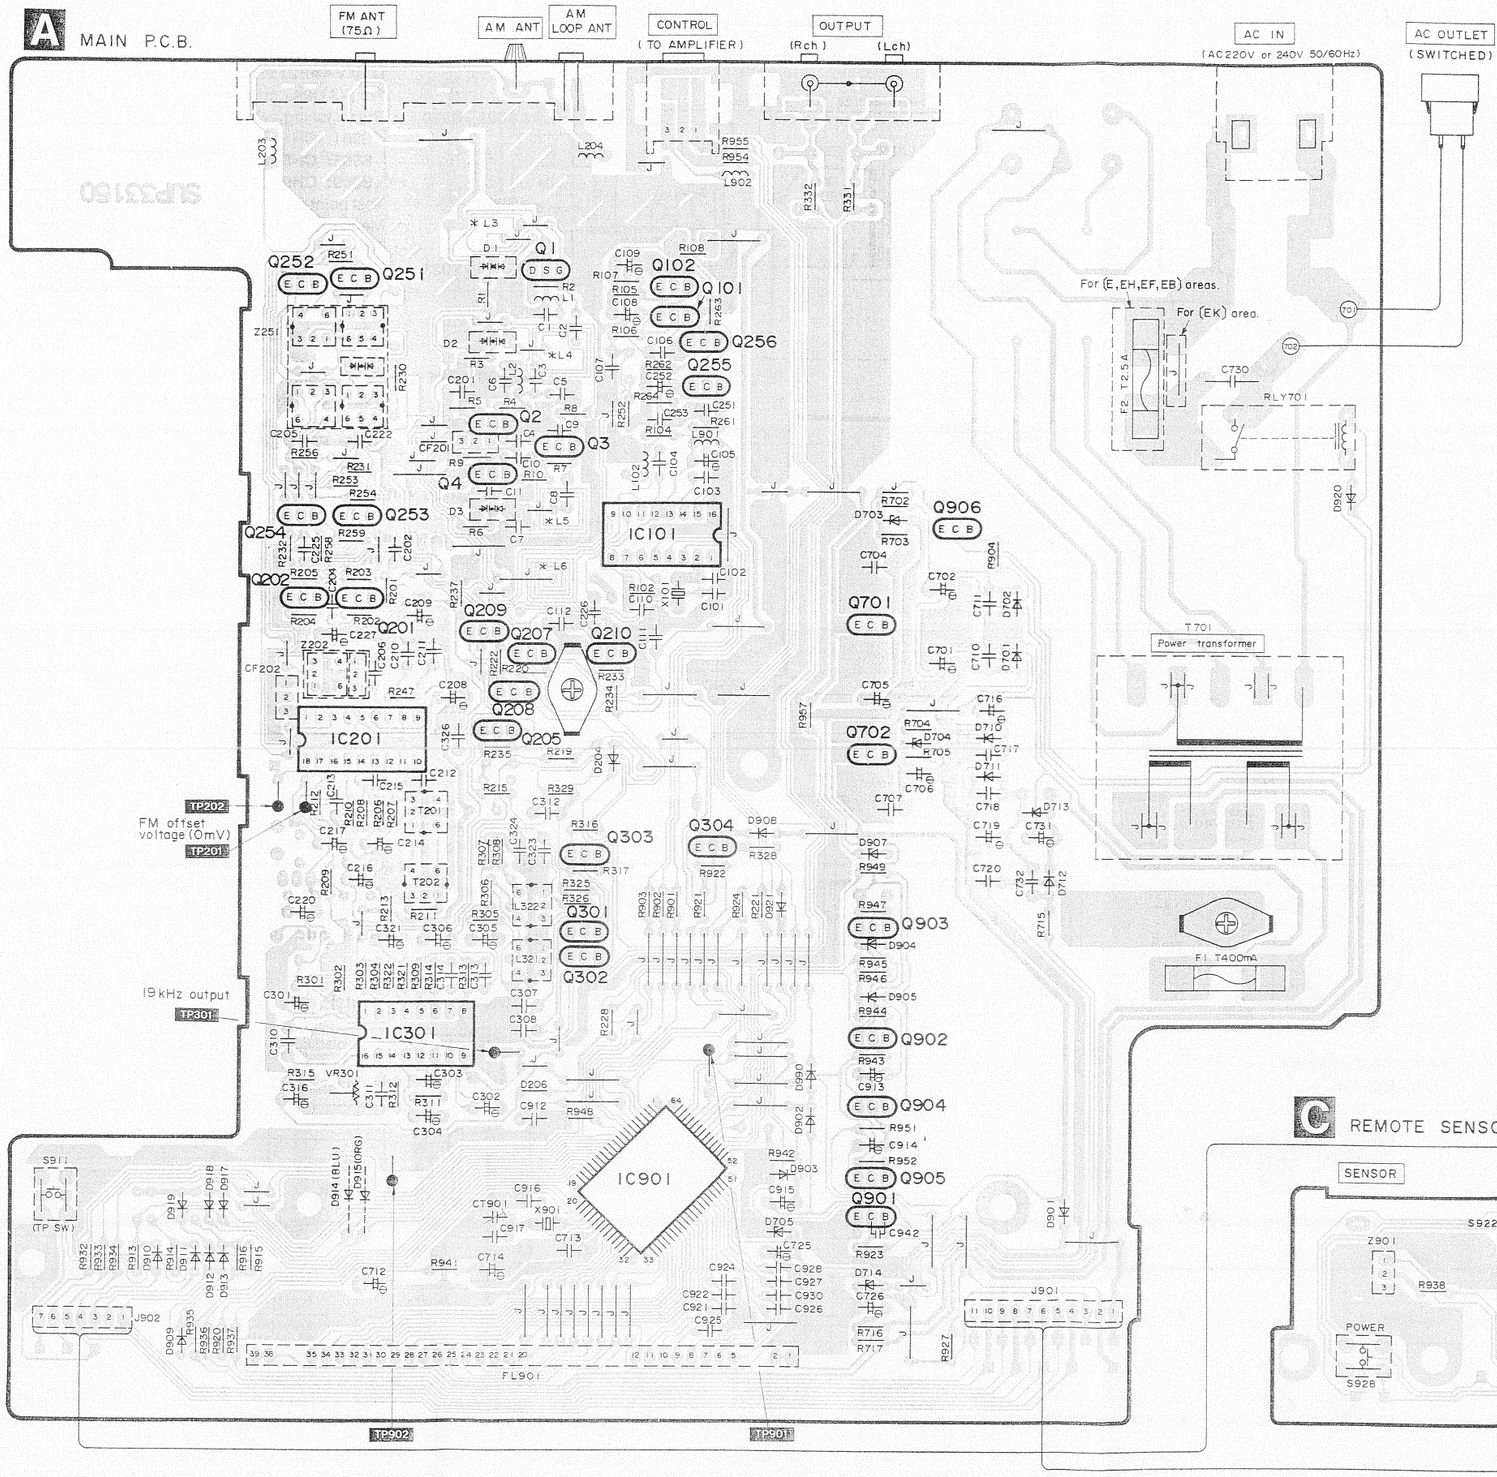

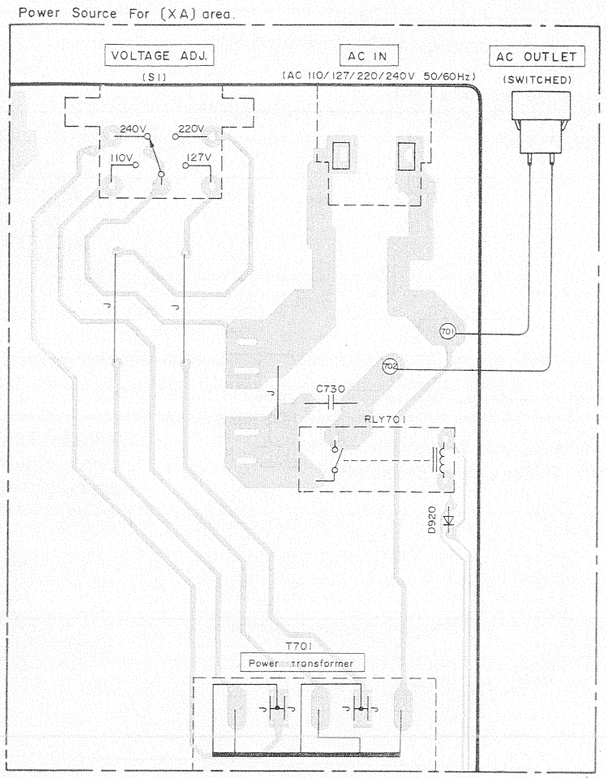

B SWITCH P.C.B.

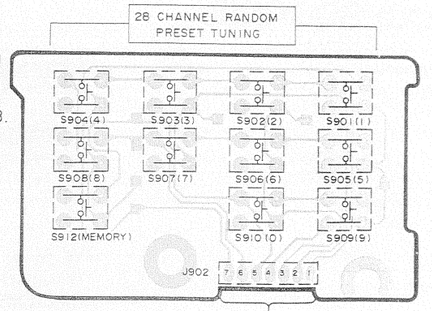

C REMOTE SENSOR / SWITCH P.C.B.

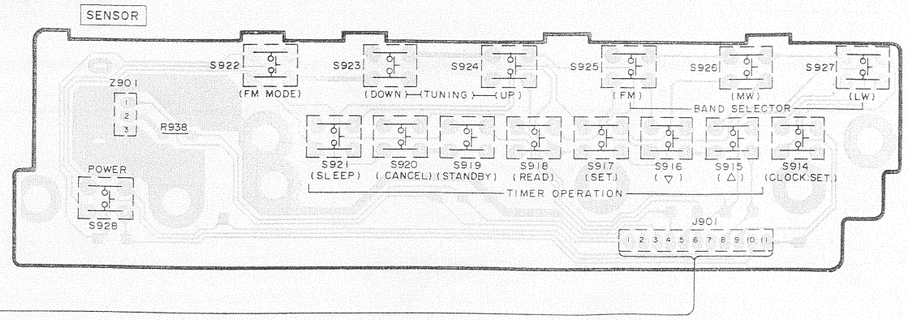

■ DESCRIPTION OF FL PANEL

•GRID ASSIGNMENT

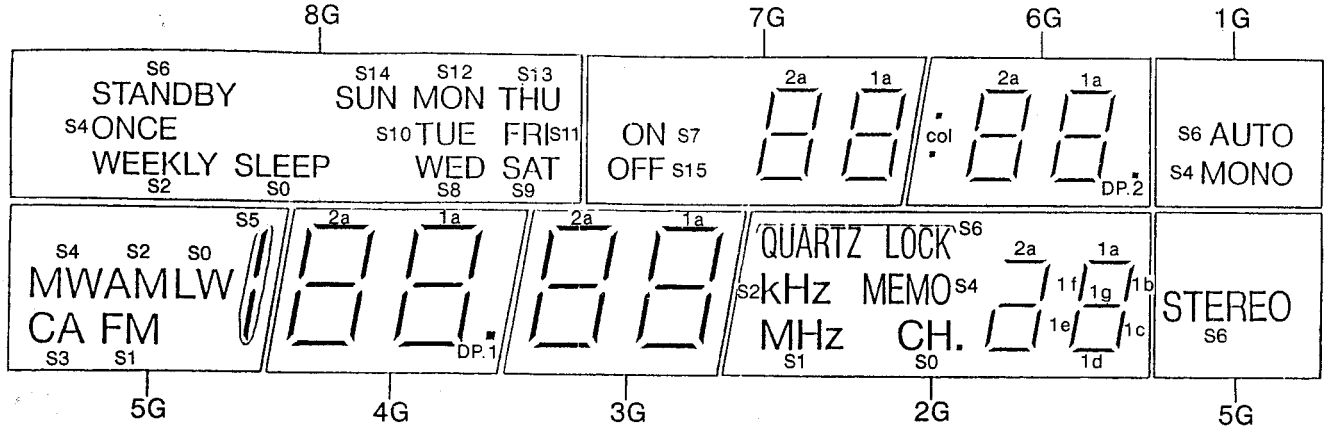

•PIN CONNECTION

PIN NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39
CONNECTION	F 1	F 1	N P	N P	8 G	7 G	6 G	5 G	4 G	3 G	2 G	1 G	N P	N P	N P	N P	N P	N P	N P	S 6	S 5	S 4	S 3	S 2	S 1	S 0	S 8	S 9	S 10	S 11	S 12	S 13	S 14	S 15	S 7	N P	N P	F 2	F 2

•ANODE CONNECTION

	8G	7G	6G	5G	4G	3G	2G	1G
S0	SLEEP	2d	2d	LW	2d	2d	CH.	-
S1	-	2e	2e	FM	2e	2e	MHz	-
S2	WEEKLY	2c	2c	AM	2c	2c	kHz	-
S3	-	2g	2g	CA	2g	2g	2c	-
S4	ONCE	2f	2f	MW	2f	2f	MEMO	MONO
S5	-	2b	2b		2b	2b	2b	-
S6	STANDBY	2a	2a	STEREO	2a	2a	QUARTZ LOCK	AUTO
S7	-	O N	col	-	-	-	-	-
S8	WED	1d	1d	-	1d	1d	1d	-
S9	SAT	1e	1e	-	1e	1e	1e	-
S10	TUE	1c	1c	-	1c	1c	1c	-
S11	FRI	1g	1g	-	1g	1g	1g	-
S12	MON	1f	1f	-	1f	1f	1f	-
S13	THU	1b	1b	-	1b	1b	1b	-
S14	SUN	1a	1a	-	1a	1a	1a	-
S15	-	OFF	DP,2	-	DP,1	-	2a,d,e,g	-

ST-X990L ST-X990L

■ SCHEMATIC DIAGRAM

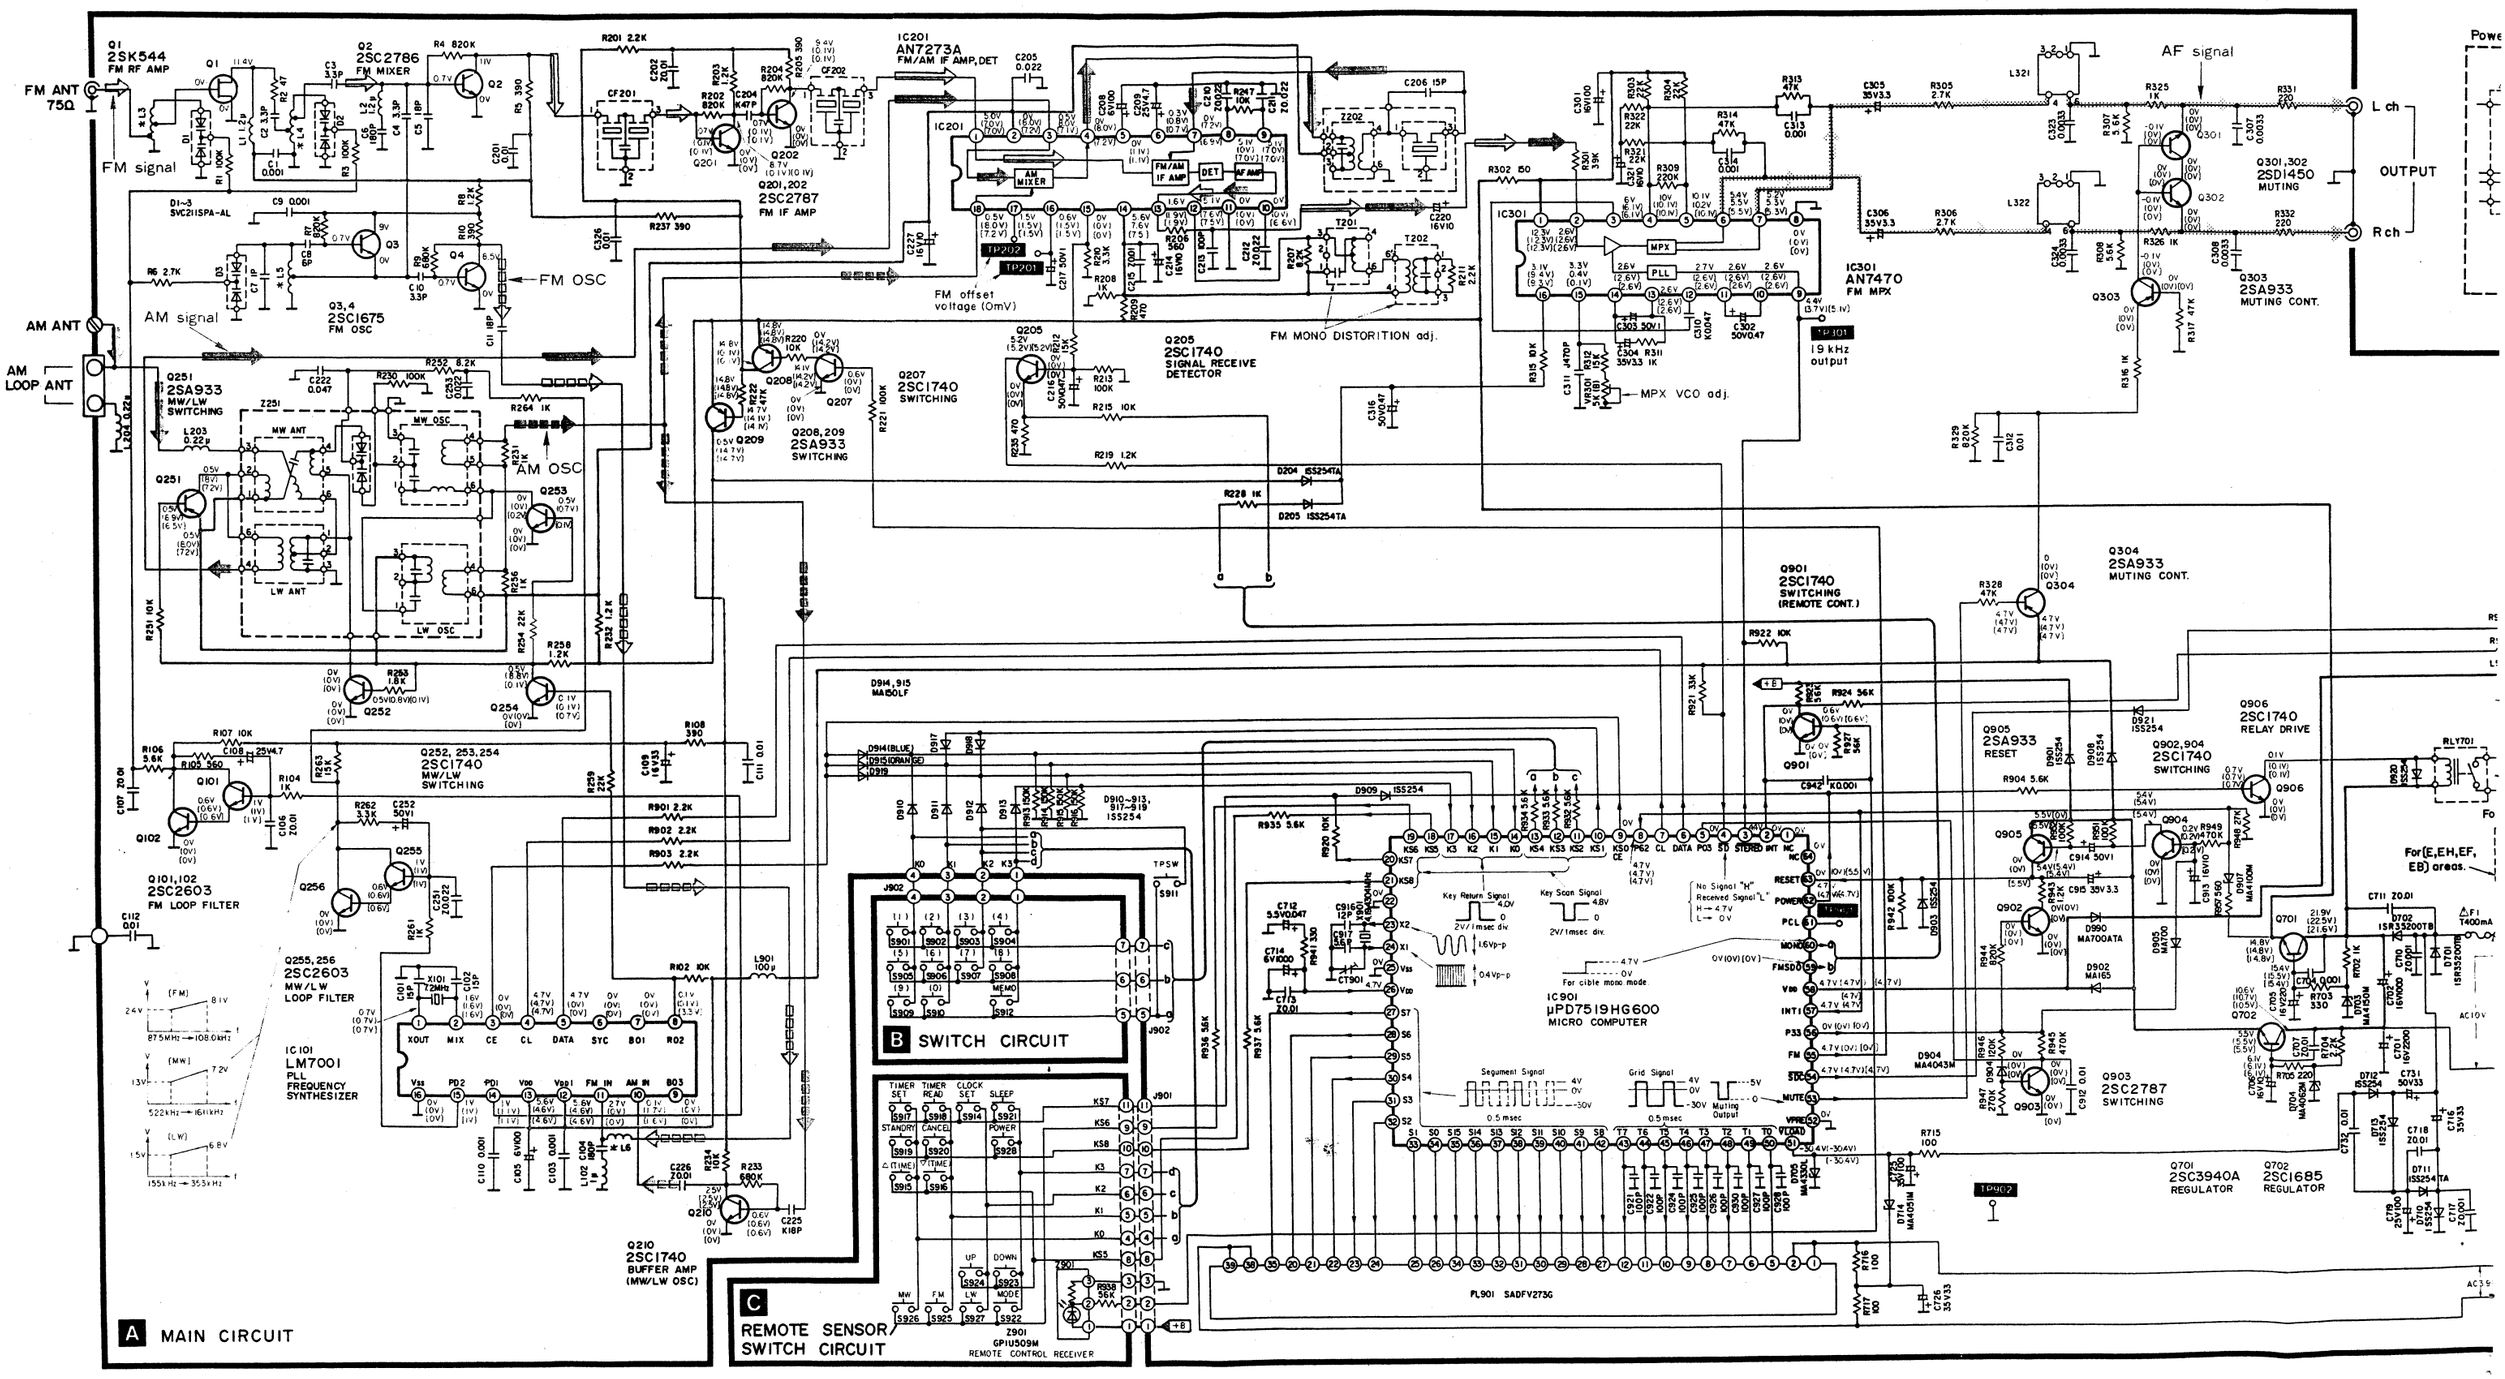

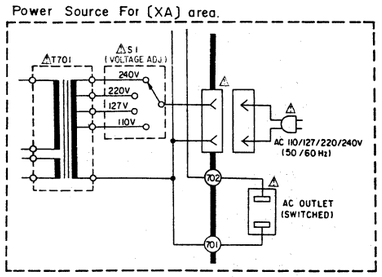

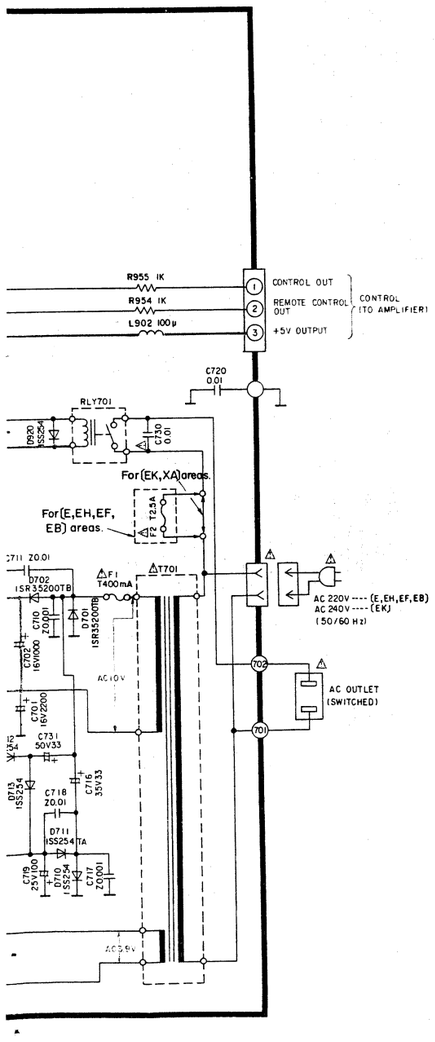

(This schematic diagram may be modified at any time with the development of new technology.)

Note 1:

- **S1** : Voltage selector switch in **"240 V"** position. **(110 V⇔127 V⇔220 V⇔240 V)** For (XA) area only.
- **S901~S910** : Preset tuning switches. **S901: CH1, S902: CH2, S903: CH3, S904: CH4, S905: CH5, S906: CH6, S907: CH7, S908: CH8, S909: CH9, S910: CH0**
- **S911** : Test point switch. **(PLL clock)**
- **S912** : Memory switch.
- **S914** : Time-set switch.
- **S915~S921** : Timer operation switches. **S915: SELECT(▲), S916: SELECT(▼) S917: SET, S918: READ, S919: STANDBY S920: CANCEL, S921: SLEEP**
- **S922** : FM mode selector switch.
- **S923, S924** : Tuning switches. **S923: DOWN, S924: UP**
- **S925~S927** : Band selector switches. **S925: FM, S926: MW, S927: LW**
- **S928** : Power switch.

- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester. ( ): AM voltage
- ——— Positive voltage lines
  □□□□▷ FM OSC
  ■■■■▶ AM OSC
  ▒▒▒▒ AF signal lines
  ⇨ FM signal
  ➡ AM signal
- Important safety notice
  Components identified by △ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

Note 2:

• Use of ceramic filters in pairs

The ceramic filters (CF201, CF202) for FM-IF circuit are available in three ranks. For this circuit, be sure to use the ceramics of the same rank in a pair.
At repairing and replacement, pay close attention to the diodes (D906, D907) for use as different diodes must be used depending on each rank of the ceramic filters.

Color marking
(Red, Black or White)



RANK (Color)	D906	D907	CENTER FREQUENCY
White	○	×	10.65MHz
Red	×	×	10.70MHz
Black	×	○	10.76MHz

Note: ○ mark: Diode is used.
× mark: Diode is not used.

✻ Caution!

IC and LSI are sensitive to static electricity.
Secondary trouble can be prevented by taking care during repair.
✻ Cover the parts boxes made of plastics with aluminum coil.
✻ Ground the soldering iron.
✻ Put a conductive mat on the work table.
✻ Do not touch the legs of IC or LSI with the fingers directly.

• Remote control unit

Note: Key No. 3, 36 and 45 are for EUR64753 only.

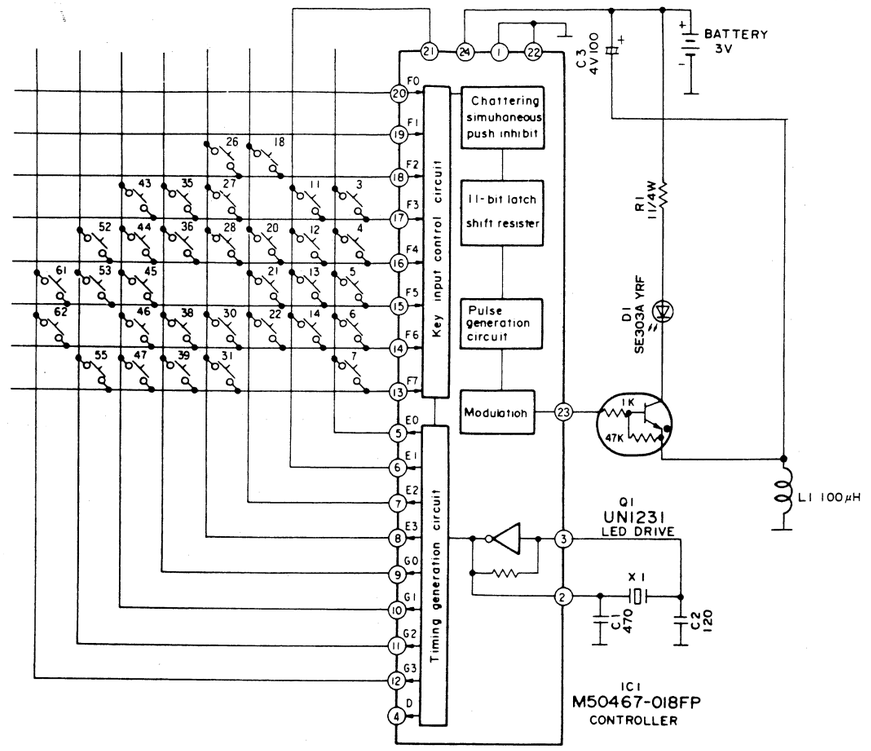

• Remote control data code

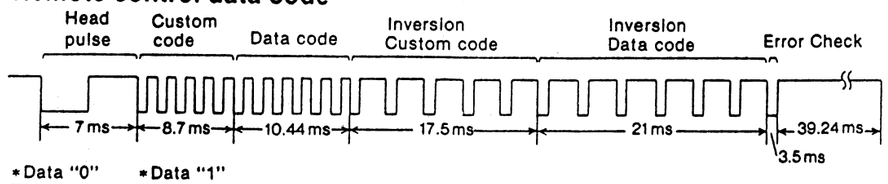

Key No.	Function	Custom code	Data code	Key No.	Function	Custom code	Data code
3	Auto rec mute	01001	000111	30	Tuner 8	01001	010111
4	Deck play ◀	01001	001001	31	Tuner 1	01001	010000
5	Vol. up	01001	100100	35	CD•skip/search	01100	000010
6	Tuner 5	01001	010100	36	Pause	01001	000110
7	Power ON/OFF	01001	100000	38	Tuner 9	01001	011000
11	CD play/pause	01100	001010	39	Tuner 2	01001	010001
12	Deck play ▶	01001	001010	43	CD•skip/search	01100	000011
13	Vol. Down	01001	100101	44	Deck stop	01001	000000
14	Tuner 6	01001	010101	45	※1	01001	110011
18	Turntable start	01001	001100	46	Tuner 0	01001	011001
20	Deck ◀◀	01001	000010	47	Tuner 3	01001	010010
21	Muting	01001	100111	52	Rec Pause	01001	001000
22	Tuner 7	01001	010110	53	Deck A/B	01001	000100
26	Turntable stop	01001	001101	55	Tuner 4	01001	010011
27	CD stop	01100	000000	61	EQ•OF/FLAT	01001	110000
28	Deck ▶▶	01001	000011	62	EQ Preset	01001	110010

■ FUNCTIONS OF IC TERMINALS (IC901: UPD7519HG600)

Pin No.	Terminal Name	Symbol	Function
1	NC	———	———
2	INT0	INT	Remote-control input Leading edge
3	P01	STEREO	Stereo input Active Low
4	P02	SD	Station detector input Active Low
5	P03		Voltage detector input Active High
6	P60	SO	Serial data output
7	P61	SCK	Serial clock output
8	P62		Power failure detection Active Low
9	P63	KS0, CE	Key source output and CE for serial transfer
10 ~ 13	P50 ~ P53	KS1 ~ KS4	Key source output Active High
14 ~ 17	P10 ~ P13	K0 ~ K3	Key return signal input Active High
18 ~ 21	P40 ~ P43	KS5 ~ KS8	Key source output Active High
22	EVENT	NC	Non-Connection Connected to non-connection Vss
23 24	X2 X1	X2 X1	Crystal oscillator 4.19 MHz
25	V_{SS}	GND	GND terminal
26	V_{DD}	V_{DD}	Power terminal 5 V±10%
27 ~ 34	S7 ~ S0	S7 ~ S0	Segment output for FIP High withstand voltage output terminal
35 ~ 42	S15 ~ S8	S15 ~ S8	Segment output for FIP High withstand voltage output terminal
43 ~ 50	T7 ~ T0	T7 ~ T0	Digit output for FIP High withstand voltage output terminal
51	VLOAD	VLOAD	Pull-down resistance common terminal for FIP −30 V
52	VPRE	VPRE	Power aupply for pre-driver

Pin No.	Terminal Name	Symbol	Function
53	P30	MUTE	Muting output Active Low
54	P31	SDC	DTS selective output Active Low
55	P32	FM	FM selective output High...FM Low...AM
56	P33		HALT mode output Active High
57	INT1	INT1	HALT mode (backup) reset Connected in parallel to P62 power failure detector terminal
58	V_{DD}	V_{DD}	Power terminal (same as pin ㉖)
59	P20	FMSDC	FM simultaneous SD circuit control output (only auto tuning and auto scan memory) Active High
60	P21	MONO	FM forced monaural output High...Forced MONO Low...AUTO
61	P22	PCL	Measuring terminal for internal system clock to count $\frac{f_x}{16}=f_0$
62	P23	POWER	Power output High...ON Low...OFF
63	RESET	RESET	Reset terminal
64	PPO	TIMER POWER	High with timer power ON→HIGH Low with timer power OFF→LOW Active High

■ BLOCK DIAGRAM

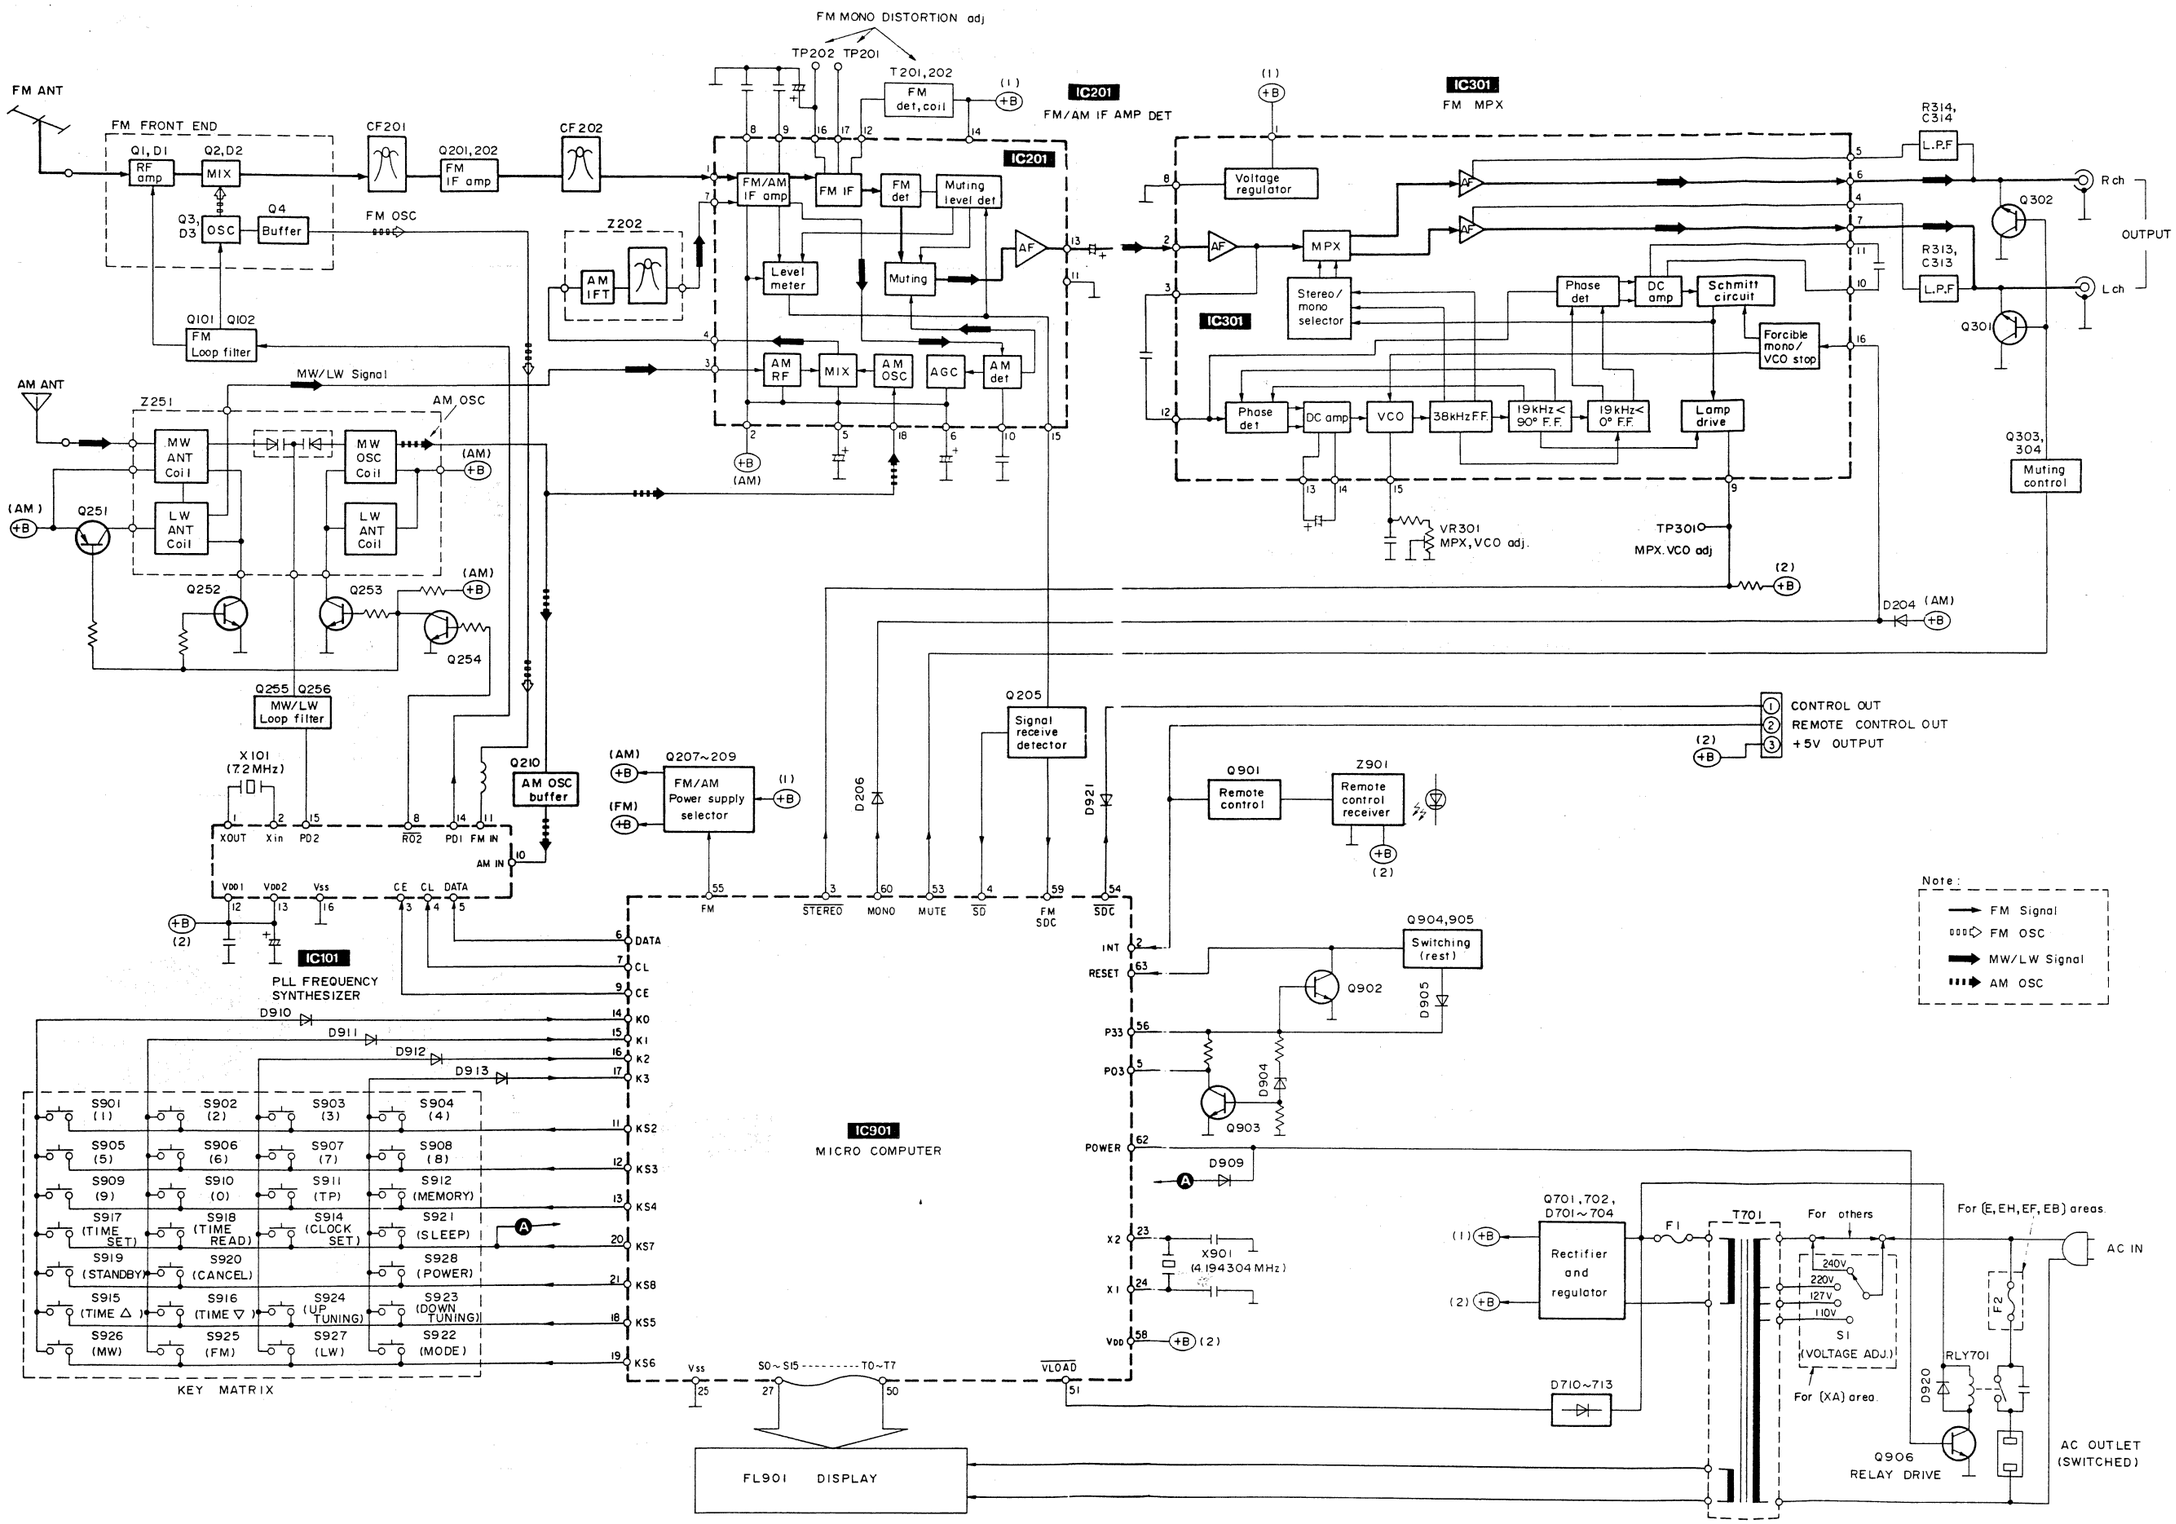

■ MEASUREMENTS AND ADJUSTMENTS

FM ADJUSTMENT

Control positions and equipment used

- FM signal generator(FM-SG)
- Stereo modulator
- Distortion analyser
- DC electronic voltmeter(EVM)
- Frequency counter
- Choke coil(100μH)
- Resistor(100kΩ)

Note: For Z202(AM-IFT), Z251(AM ANT and OSC coil), L321 (L.P.F) and L 322(L.P.F), they are supplied as adjusted parts. So, do not turn the cores of the parts.

FM MONO DISTORTION ADJUSTMENT

1.Test equipment connection is shown in figure.
2.Set the unit to "**FM**" mode.
3.Set the radio frequency display and signal generator to **100.10MHz**.
4.Adjust the core of **T201** so that the voltage measured in signal mode is **0mV(0±20mV)** in 300mV range.
5.Adjust **T202** so that the distortion factor of L-CH is minimized.
6.Repeat steps 4 and 5.
7.Make sure that the distortion factors of L-CH and R-CH are nearly the same and minimum.

Note: The adjusting screwdriver used should be made of resin.

FM SIGNAL GENERATOR CONDITION
Modulation 100%
Modulation frequency 1kHz
Output level.....66dB

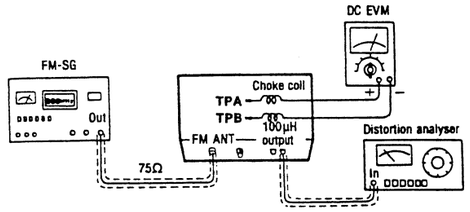

TPA = TP201 , TPB = TP202

MPX VCO ADJUSTMENT

1.Test equipment connection is shown in figure.
2.Set the unit to "**on/auto**" position.
3.Set the radio frequency display and signal genarator to **100.10MHz**.
4.Adjust **VR301** for **19kHz±30Hz** on frequency counter reading.

USING ALTERNATE SYSTEM

1.Receive the stereo broadcast.
2.Adjust **VR301** until stereo indicator lights up. Fix the arm of **VR301** as shown in figure.

FM SIGNAL GENERATOR CONDITION
Modulation 100%
Modulation frequency 0kHz
Output level.....66dB

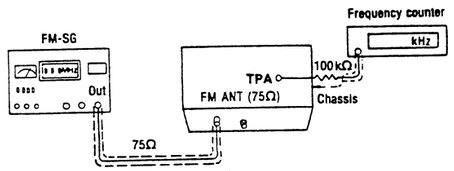

TPA = TP301

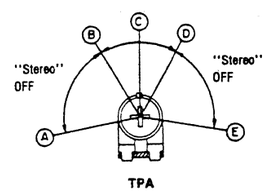

TPA

Ⓐ−Ⓑ,
Ⓓ−Ⓔ..... "Stereo" OFF position
Ⓑ−Ⓓ..... "Stereo" ON position (Indicator lighting)
Ⓒ..... Adjust point of pilot circuit

TPA = VR301

PLL CLOCK FREQUENCY ADJUSTMENT

1.Test equipment connection is shown in figure.
2.Set the unit to "**AM**" position.
3.Push the Test point switch **(S911).**
4.Set the radio frequency display **1629 kHz**.
5.Adjust **CT901** for **524.288kHz±10Hz** on frequency counter reading.

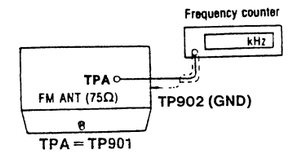

●ADJUSTMENT POINTS

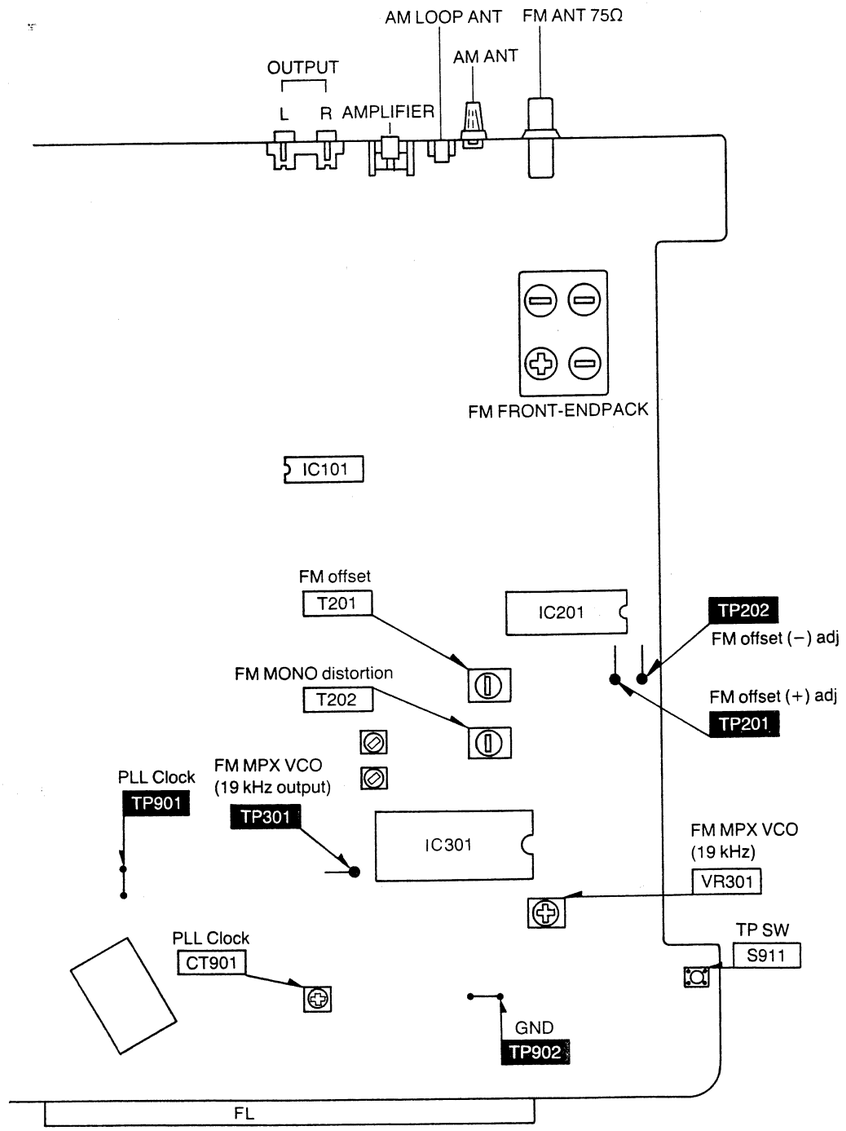

■ REPLACEMENT PARTS LIST

Notes : * Important safety notice :
Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
* Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)
Parts without these indications can be used for all areas.
* Remote Control Ass'y:
Supply period for three years from termination of production.
* Ⓕ : Indicates parts that are suppled by PFS.(Panasonic France S.A.Longwy division)

•ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
INTEGRATED CIRCUITS		
IC101	LM7001	I.C. PLL
IC201	AN7273B	I.C. DET
IC301	SVIUPC1161C3	I.C., FM MPX
IC901	UPD7519HG600	I.C. MICRO COM
TRANSISTORS		
Q1	2SK544F-AC	TRANSISTOR
Q2	2SC2786M	TRANSISTOR
Q3	2SC1675L1	TRANSISTOR
Q4	2SC1675L1	TRANSISTOR
Q101	2SC2603EFG	TRANSISTOR
Q102	2SC2603EFG	TRANSISTOR
Q201	2SC2787L	TRANSISTOR
Q202	2SC2787L	TRANSISTOR
Q205	2SC1740SQ	TRANSISTOR
Q207	2SC1740SQ	TRANSISTOR
Q208	2SA933SQR	TRANSISTOR
Q209	2SA933SQR	TRANSISTOR
Q210	2SC1740SQ	TRANSISTOR
Q251	2SA933SQR	TRANSISTOR
Q252	2SC1740SQ	TRANSISTOR
Q253	2SC1740SQ	TRANSISTOR
Q254	2SC1740SQ	TRANSISTOR
Q255	2SC2603EFG	TRANSISTOR
Q256	2SC2603EFG	TRANSISTOR
Q301	2SD1450RS	TRANSISTOR
Q302	2SD1450RS	TRANSISTOR
Q303	2SA933SQR	TRANSISTOR
Q304	2SA933SQR	TRANSISTOR
Q701	2SC3940AQSTA	TRANSISTOR
Q702	2SC1685RST	TRANSISTOR
Q901	2SC1740SQ	TRANSISTOR
Q902	2SC1740SQ	TRANSISTOR
Q903	2SC2787L	TRANSISTOR
Q904	2SC1740SQ	TRANSISTOR
Q905	2SA933SQR	TRANSISTOR
Q906	2SC1740SQ	TRANSISTOR
DIODES		
D1	SVC211SPA-AL	VARICAP
D2	SVC211SPA-AL	VARICAP
D3	SVC211SPA-AL	VARICAP
D204	MA165	DIODE
D206	MA165	DIODE
D701 ⚠	SVD1SR35200A	RECTIFIER
D702 ⚠	SVD1SR35200A	RECTIFIER
D703	MA4150M	DIODE
D704	MA4062-M	DIODE
D705	MA4330L	DIODE
D710	MA165	DIODE
D711	MA165	DIODE
D712	MA165	DIODE
D713	MA165	DIODE
D714	MA4051-M	DIODE
D901	MA165	DIODE
D902	MA165	DIODE
D903	MA165	DIODE
D904	MA4043M	DIODE
D905	MA700A	DIODE
D907	MA4100M	DIODE
D908	MA165	DIODE
D909	MA165	DIODE
D910	MA165	DIODE
D911	MA165	DIODE
D912	MA165	DIODE
D913	MA165	DIODE
D914	MA162A	DIODE
D915	MA162A	DIODE
D917	MA165	DIODE
D918	MA165	DIODE
D919	MA165	DIODE
D920	MA165	DIODE
D921	MA165	DIODE
VARIABLE RESISTORS		
VR301	EVND4AA00B53	V.R
VARIABLE CAPACITORS		
CT901	ECRLA010A52	TRIMMER CAPACITOR
COILS AND TRANSFORMERS		
L1	RLQZP1R2KT-Y	CHOKE COIL
L2	RLQZP1R2KT-Y	CHOKE COIL
L102	RLQZP1R2KT-Y	CHOKE COIL
L203	ELEPKR22MA	COIL
L204	ELEPKR22MA	COIL
L321	SLM1B9-P	MPX COIL
L322	SLM1B9-P	MPX COIL
L901	RLQZP101KT-Y	COIL
L902	RLQZP101KT-Y	COIL
T201	SLI4B511-Z	I.F.TRANSFORMER
T202	SLI4B513-Z	I.F.TRANSFORMER
T701 ⚠ (E, EH, EF, EB)	SLT5K262-K	POWER TRANSFORMER
T701 ⚠ (EK)	SLT5K263-K	POWER TRANSFORMER
T701 ⚠ (XA)	SLT5K264-K	POWER TRANSFORMER
COMPONENT COMBINATIONS		
Z202	SLI7Z101-T	I.F.TRANSFORMER
Z251	SLA6Z1-T	COIL
Z901	GP1U509M	DIODE . REMOTE SENSOR
FILTERS		
CF201	SVFE107MS8A	CERAMIC FILTER (RED)
CF201	SVFE107MS8B	CERAMIC FILTER
CF202	SVFE107MS8A	CERAMIC FILTER (RED)
CF202	SVFE107MS8B	CERAMIC FILTER
OSCILLATORS		
FL901	SADFV273G	DISPLAY TUBE
X101	SVQ49U722-S	CRYSTAL OSCILLATOR
X901	SVQ49U422-S	CRYSTAL OSCILLATOR
FUSES		
F1 ⚠	XBA2C04TB0	FUSE , T0.4A250V
F2 ⚠	XBA2C25TB0	FUSE, T2.5A 250V
SWITCHES		
S1 ⚠ (XA)	SSR187-1	SW, VOLTAGE SELECTOR
S901	EVQQB005R	SW
S902	EVQQB005R	SW
S903	EVQQB005R	SW
S904	EVQQB005R	SW
S905	EVQQB005R	SW
S906	EVQQB005R	SW
S907	EVQQB005R	SW
S908	EVQQB005R	SW
S909	EVQQB005R	SW
S910	EVQQB005R	SW
S911	EVQQB005R	SW
S912	EVQQB005R	SW
S914	EVQQB005R	SW
S915	EVQQB005R	SW

■ EXPLODED VIEW

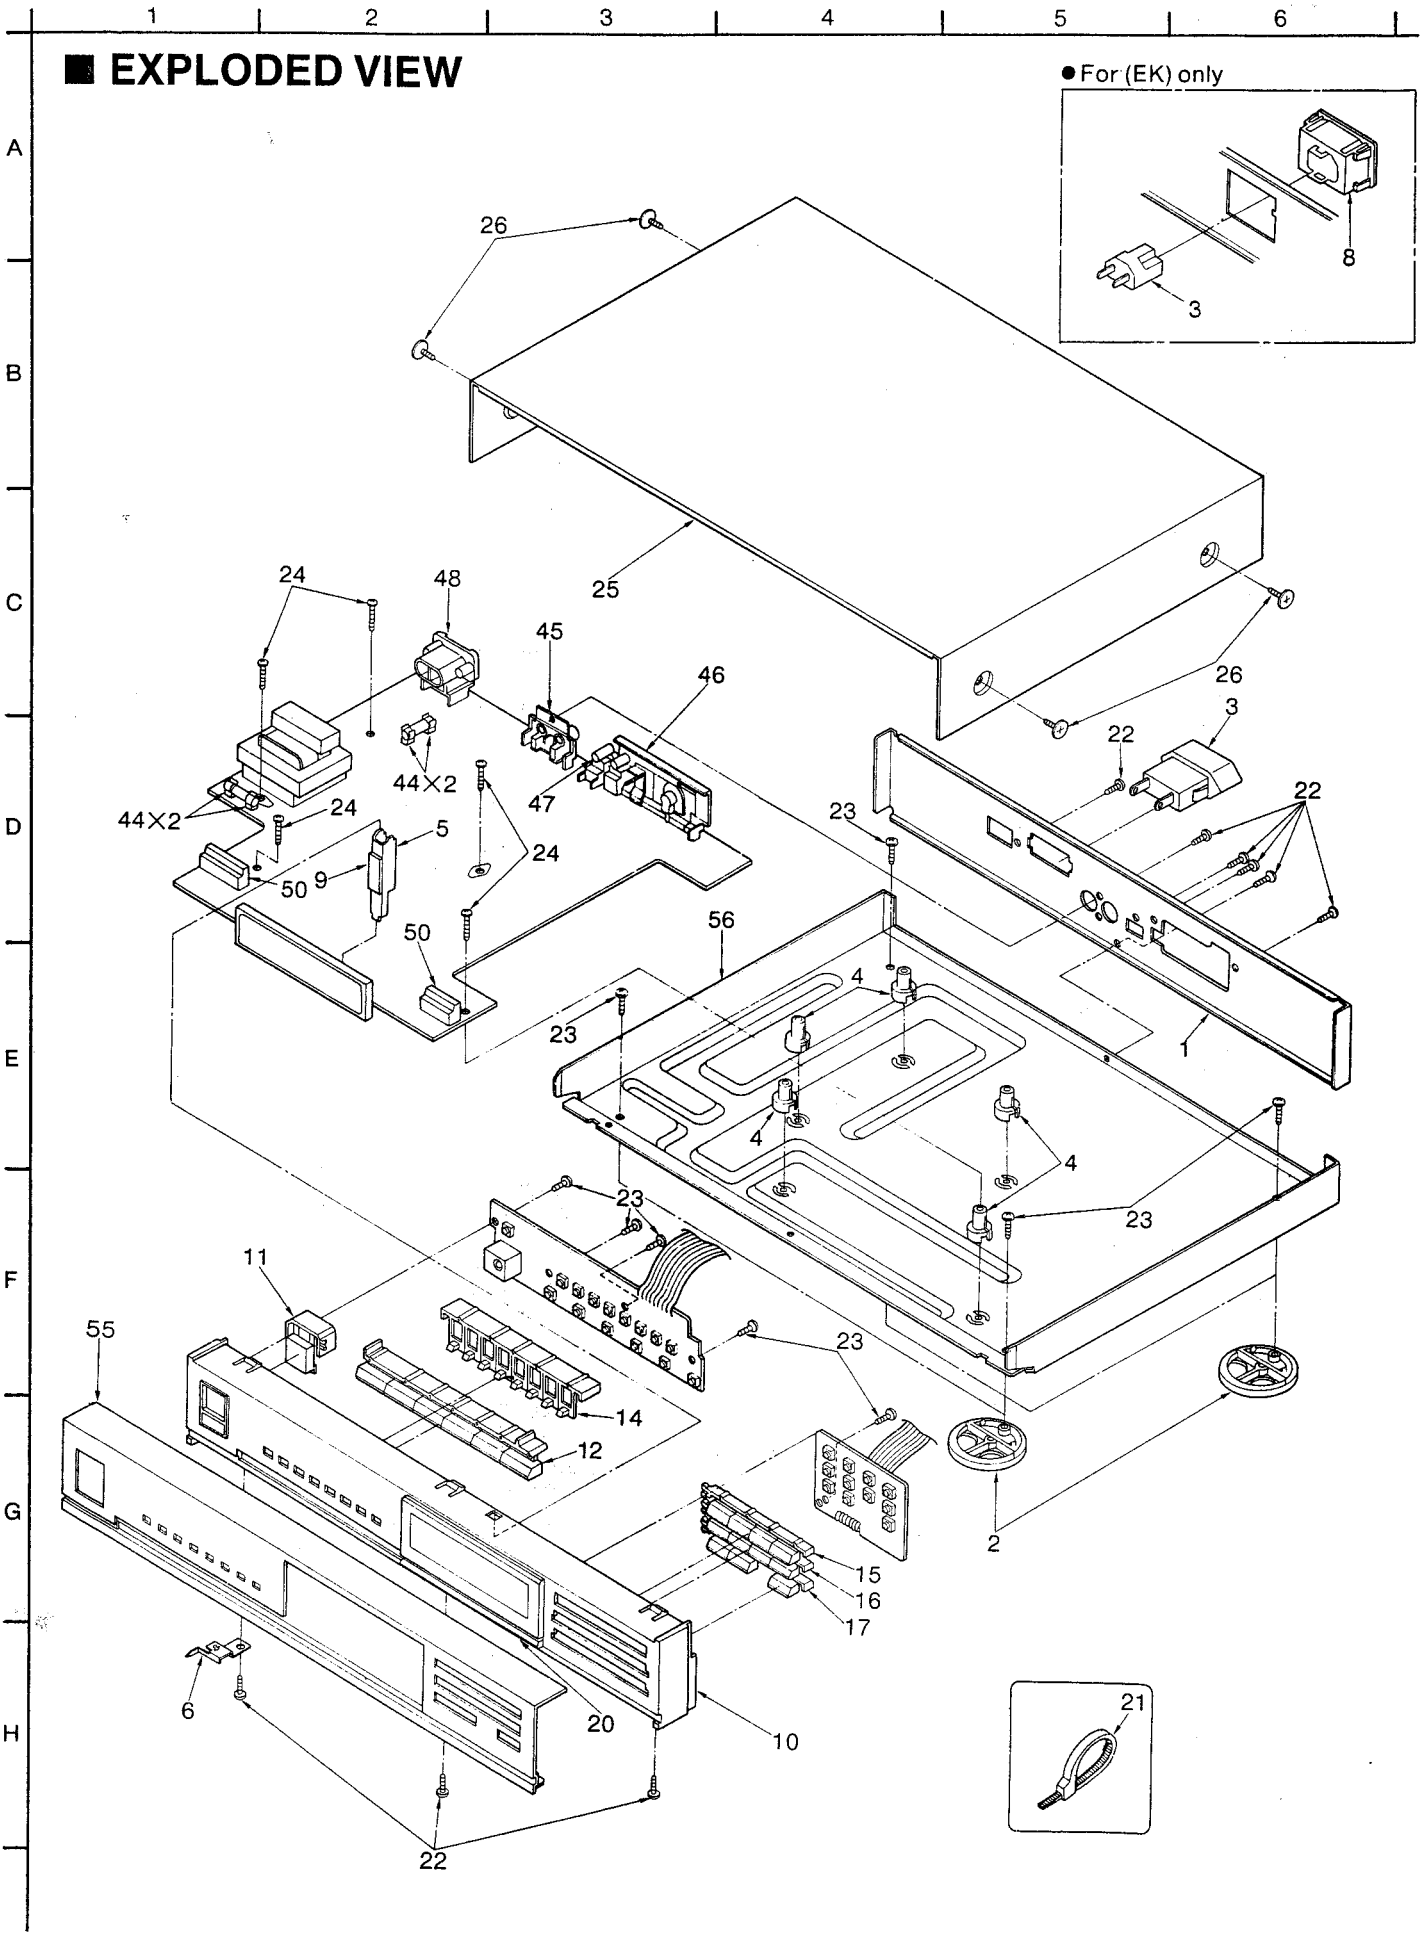

Ref. No.	Part No.	Description
S916	EVQQB005R	SW
S917	EVQQB005R	SW
S918	EVQQB005R	SW
S919	EVQQB005R	SW
S920	EVQQB005R	SW
S921	EVQQB005R	SW
S922	EVQQB005R	SW
S923	EVQQB005R	SW
S924	EVQQB005R	SW
S925	EVQQB005R	SW
S926	EVQQB005R	SW
S927	EVQQB005R	SW
S928	EVQQB005R	SW
RELAYS		
RLY1	SSY138	RELAY

•CABINET PARTS LIST

Ref. No.	Part No.	Description
CABINET AND CHASSIS		
1 (EH, EB)	SGPTX990L-KE	REAR PANEL
1 (EF)	SGPTX990L-KF	REAR PANEL [F]
1 (E)	SGP7360A	PANEL
1 (EK)	SGP7361A	PANEL
1 (XA)	SGP7362A	PANEL
2	SKL307	FOOT
3 ⚠ (XA)	SJS9221	SOCKET
3 ⚠ (E, EH, EF, EB)	SJS9225	AC OUTLET
3 ⚠ (EK)	SJS9332B	AC OUTLET
4	SHE181	HOLDER
5	SUW3102	BRACKET
6	SUS874	SPRING
8 (EK)	SJS9332A	AC OUTLET COVER
9	SHG6390	RUBBER SPACER
10	SGXTX990-KG	FRONT GRILLE
11	SBC986	BUTTON
12	SBC1029A	BUTTON
14	SBC988	BUTTON
15	SBC989D	BUTTON
16	SBC989E	BUTTON
17	SBZ9104	BUTTON
20	SGX7971A	ORNAMENT
21	SHR328	LEAD WIRE CLAMPER
22	XTBS3+8JFZ1	SCREW
23	XTB3+8G	SCREW
24	XTB3+20J	SCREW
25	SKC2060K16	CABINET
26	SNE2129-1	SCREW
44	SJT347	FUSE HOLDER
45	SJFD4	OUTPUT TERMINAL(PHONO)
46 (E, EH, EF, EB) (EK)	SJF8305N	TERMINAL PLATE
46 (XA)	SJF8402N	TERMINAL PLATE
47	SJS306	SOCKET
48 ⚠	SJS9236	AC INLET
50	SJT30740LX-V	CONNECTOR(7P)
50	SJT31143-V	LUG TERMINAL
55	SGWTX990L-KE	FRONT PANEL
56	SKU11651-1	BOTTOM BOARD

•PACKING PARTS LIST

Ref. No.	Part No.	Description
PACKING MATERIAL		
P1	SPP740	PROTECTION COVER
P2 (E, EH, EB, EK) (XA)	SPG6346	PACKING CASE
P2 (EF)	SPG6347	PACKING CASE [F]
P3	SPS5169	PAD
P4	SPS5170	PAD
ACCESSORIES		
A1	SMA231M	BRACKET
A2 (XA)	SSA269	FM ANTENNA
A2 (E, EH, EF, EB) (EK)	SSA270	ANTENNA
A3 ⚠ (EK)	SJP9009	PLUG
A4 ⚠ (E, EH, EF, EB)	SFDAC05E03	POWER CORD
A4 ⚠ (EK)	SFDAC05G02	POWER CORD
A4 ⚠ (XA)	SJA168	POWER CORD
A5 ⚠ (XA)	RJP120ZBS-H	AC PLUG ADAPTOR
A6	SPB1139-1	AM LOOP ANTENNA
A7	UM-4NE	BATTERY
A8	SJPK2203-1	CORD
A9 (EF)	SQFTX990L-EF	INSTRUCTION BOOK [F]
A9 (XA)	SQF13284	INSTRUCTION BOOK
A9 (E, EH, EB)	SQF13287	INSTRUCTION BOOK
A9 (EK)	SQF13288	INSTRUCTION BOOK
A10	SMA233-1M	HOLDER
A11	XTN3+10AFZ	SCREW
A12	SWKTX930E	LEAD WIRE
A13	SPP740	PROTECTION COVER

•REMOTE CONTROL UNIT

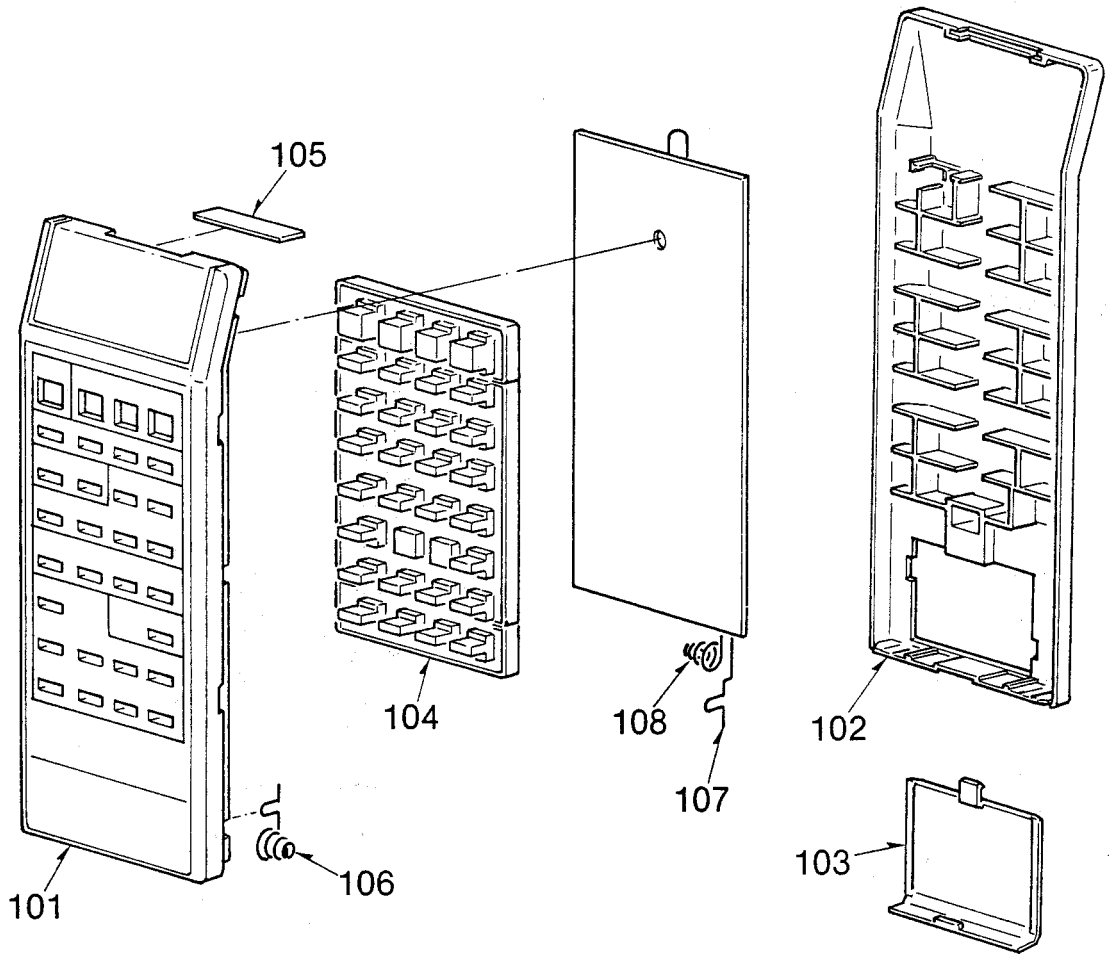

•REMOTE CONTROL UNIT PARTS LIST

Ref. No.	Part No.	Description
REMOTE CONTROL ASS'Y		
RM1	EUR64754	REMOTE CONTROLLER
REMOTE CONTROLL		
INTEGRATED CIRCUITS		
IC1	M50467018FP	INTEGRATED CIRCUIT
TRANSISTORS		
Q1	UN1231	TRANSISTOR
DIODES		
D1	LN66-S	L.E.D
COIL		
L1	ELEA101JA	COIL
OSCILLATOR		
X1	CSB420PB1	OSCILLATOR

Ref. No.	Part No.	Description
RESISTORS		
R1	ERDS2TJ1R0	CARBON, 1Ω, 1/4W
CAPACITORS		
C1	ECKD1H471KB	CERAMIC, 470PF, 50V
C2	ECKD1H121KB	CERAMIC, 120PF, 50V
C3	ECEA0GK101	ELECTROLYTIC, 100μF, 4V
MECHANISM PARTS		
101	UR64VCS566	UPPER CABINET
102	UR64CS803A	LOWER CABINET
103	UR64EC804	BATTERY COVER
104	UR64CT805D	RUBBER SWITCH
105	UR52SB327	PLATE
106	UR64TD374	BATTERY TERMINAL(COMMON)
107	UR64TD808	TERMINAL
108	UR64TD809	TERMINAL

■ RESISTORS AND CAPACITORS

Notes : * Important safety notice :
Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
* Bracketed indications in Ref. No. columns specify the area. (Refer to the first page for area.)
Parts without these indications can be used for all areas.

Numbering System of Resistor

Example:

ERD	25	F	J	102
Type	Wattage (1/4W)	Shape	Tolerance	Value (1KΩ)
ERX	2	AN	J	471
Type	Wattage (2W)	Shape	Tolerance	Value (470Ω)

Numbering System of Capacitor

Example:

ECKD	1H	102	Z	F
Type	Voltage (50V)	Value (0.001μF)	Tolerance	Peculiarity
ECEA	50	M	330	
Type	Voltage (50V)	Peculiarity	Value (33μF)	

- Capacity are in microfarads (μF) unless specified otherwise, P = Pico-farads (pF) F = Farads (F).
- Resistance are in ohms (Ω), unless specified otherwise, 1K = 1,000Ω, 1M = 1,000kΩ

Resistor Type	Wattage		Tolerance
ERD : Carbon	10 : 1/8W	12 : 1/2W	J : ±5%
ERG : Metal Oxide	14 : 1/4W	25 : 1/4W	F : ±1%
ERQ : Fuse Type Metal	1A : 1W	18 : 1/8W	G : ±2%
ERX : Metal Film	S2 : 1/4W	S1 : 1/2W	J : ±5%
ERD L : Carbon (chip)	2F : 1/4W	50 : 1/2W	K : ±10%
ERO K : Metal Film (chip)	2A : 2W	3A : 3W	M : ±20%
ERC : Solid	6G : 1/10W	8G : 1/8W	
ERF : Incombustible Box-Shaped			
ERM : Wire-Wound			
RRJ : Cip Resistor			
ERJ : Cip Resistor			

Capacitor Type	Voltage		Tolerance
ECE : Electrolytic	0J : 6.3V	1A : 10V	K : ±10%
ECCD : Ceramic	1C : 16V	1E : 25V	M : ±20%
ECKD : Ceramic Capacitor	1H : 50V	1V : 35V	Z : +80 % −20
ECQM : Poyester	50 : 50V	05 : 50V	
ECQP : Polypropylene	2H : 500V	2A : 100V	J : ±5%
ECG : Ceramic	1 : 100V	1J : 63V	G : ±2%
ECEA N : Non Polar Electrolytic	KC : 400V AC		F : ±1%
QCU : Ceramic (Chip Type)	KC : 125V AC (UL)		C : ±0.25pF
ECUX : Ceramic (Chip Type)			D : ±0.5pF
ECF : Semiconductor			
EECW : Liquid electrolyte double layer capacitor			

Ref. No.	Part No.	Value.
RESISTORS(VALUE,WATTAGE)		
R1	ERDS2TJ104	100K 1/4
R2	ERDS2TJ470	47 1/4
R3	ERDS2TJ104	100K 1/4
R4	ERDS2TJ824	820K 1/4
R5	ERDS2TJ391	390 1/4
R6	ERDS2TJ272	2.7K 1/4
R7	ERDS2TJ824	820K 1/4
R8	ERDS2TJ122	1.2K 1/4
R9	ERDS2TJ684	680K 1/4
R10	ERDS2TJ391	390 1/4
R102	ERDS2TJ103	10K 1/4
R104	ERDS2TJ102	1K 1/4
R105	ERDS2TJ561	560 1/4
R106	ERDS2TJ562	5.6K 1/4
R107	ERDS2TJ103	10K 1/4
R108	ERDS2TJ391	390 1/4
R201	ERDS2TJ122	1.2K 1/4
R202	ERDS2TJ824	820K 1/4
R203	ERDS2TJ122	1.2K 1/4
R204	ERDS2TJ824	820K 1/4
R205	ERDS2TJ391	390 1/4
R206	ERDS2TJ561	560 1/4
R207	ERDS2TJ822	8.2K 1/4
R208	ERDS2TJ102	1K 1/4
R209	ERDS2TJ471	470 1/4
R210	ERDS2TJ332	3.3K 1/4
R211	ERDS2TJ222	2.2K 1/4
R212	ERDS2TJ153	15K 1/4
R213	ERDS2TJ104	100K 1/4
R215	ERDS2TJ103	10K 1/4
R219	ERDS2TJ122	1.2K 1/4
R220	ERDS2TJ103	10K 1/4
R221	ERDS2TJ104	100K 1/4
R222	ERDS2TJ473	47K 1/4
R228	ERDS2TJ102	1K 1/4
R230	ERDS2TJ104	100K 1/4
R231	ERDS2TJ102	1K 1/4
R232	ERDS2TJ122	1.2K 1/4
R233	ERDS2TJ684	680K 1/4
R234	ERDS2TJ103	10K 1/4
R235	ERDS2TJ471	470 1/4
R237	ERDS2TJ391	390 1/4
R247	ERDS2TJ103	10K 1/4
R251	ERDS2TJ103	10K 1/4
R252	ERDS2TJ822	8.2K 1/4
R253	ERDS2TJ182	1.8K 1/4
R254	ERDS2TJ223	22K 1/4
R256	ERDS2TJ102	1K 1/4
R258	ERDS2TJ122	1.2K 1/4
R259	ERDS2TJ223	22K 1/4
R261	ERDS2TJ102	1K 1/4
R262	ERDS2TJ332	3.3K 1/4
R263	ERDS2TJ153	15K 1/4
R264	ERDS2TJ102	1K 1/4
R301	ERDS2TJ393	39K 1/4
R302	ERDS2TJ151	150 1/4
R303	ERDS2TJ223	22K 1/4
R304	ERDS2TJ223	22K 1/4
R305	ERDS2TJ272	2.7K 1/4
R306	ERDS2TJ272	2.7K 1/4
R307	ERDS2TJ562	5.6K 1/4
R308	ERDS2TJ562	5.6K 1/4
R309	ERDS2TJ224	220K 1/4
R311	ERDS2TJ102	1K 1/4
R312	ERDS2TJ153	15K 1/4
R313	ERDS2TJ473	47K 1/4
R314	ERDS2TJ473	47K 1/4
R315	ERDS2TJ103	10K 1/4
R316	ERDS2TJ102	1K 1/4
R317	ERDS2TJ473	47K 1/4
R321	ERDS2TJ223	22K 1/4
R322	ERDS2TJ223	22K 1/4
R325	ERDS2TJ102	1K 1/4
R326	ERDS2TJ102	1K 1/4
R328	ERDS2TJ473	47K 1/4
R329	ERDS2TJ824	820K 1/4
R702	ERDS2TJ102	1K 1/4
R703	ERDS2TJ331	330 1/4
R704	ERDS2TJ222	2.2K 1/4
R705	ERDS2TJ221	220 1/4
R715	ERDS2TJ101	100 1/4
R716	ERDS2TJ101	100 1/4
R717	ERDS2TJ101	100 1/4
R901	ERDS2TJ222	2.2K 1/4
R902	ERDS2TJ222	2.2K 1/4
R903	ERDS2TJ222	2.2K 1/4
R904	ERDS2TJ562	5.6K 1/4
R913	ERDS2TJ154	150K 1/4
R914	ERDS2TJ154	150K 1/4
R915	ERDS2TJ154	150K 1/4
R916	ERDS2TJ154	150K 1/4
R920	ERDS2TJ103	10K 1/4
R921	ERDS2TJ333	33K 1/4
R922	ERDS2TJ103	10K 1/4
R923	ERDS2TJ562	5.6K 1/4
R924	ERDS2TJ563	56K 1/4
R927	ERDS2TJ563	56K 1/4
R932	ERDS2TJ562	5.6K 1/4
R933	ERDS2TJ562	5.6K 1/4
R934	ERDS2TJ562	5.6K 1/4
R935	ERDS2TJ562	5.6K 1/4
R936	ERDS2TJ562	5.6K 1/4
R937	ERDS2TJ562	5.6K 1/4
R938	ERDS2TJ563	56K 1/4
R941	ERDS2TJ331	330 1/4
R942	ERDS2TJ104	100K 1/4
R943	ERDS2TJ122	1.2K 1/4
R944	ERDS2TJ824	820K 1/4
R945	ERDS2TJ474	470K 1/4
R946	ERDS2TJ124	120K 1/4
R947	ERDS2TJ274	270K 1/4
R948	ERDS2TJ273	27K 1/4
R949	ERDS2TJ474	470K 1/4
R951	ERDS2TJ104	100K 1/4
R952	ERDS2TJ104	100K 1/4
R954	ERDS2TJ102	1K 1/4
R955	ERDS2TJ102	1K 1/4
R957	ERDS2TJ561	560 1/4
CAPACITORS(VALUE,VOLTAGE)		
C1	ECBT1H102KB	0.001 50
C2	RCBS1H3R3KCY	3.3P 50
C3	RCBS1H3R3KCY	3.3P 50
C4	RCBS1H3R3KCY	3.3P 50

Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.	Ref. No.	Part No.	Value.
C5	RCBS1H180JCY	18P 50	C217	ECEA1HK010	1 50	C707	ECKD1H103PF	0.01 50
C6	RCBS1H181KBY	180P 50	C220	ECEA1CKS100	10 16	C710	ECKD2H102ZF	0.001 500
C7	RCBS1H1R0MCY	1P 50	C222	ECFTD473KXL	0.047 25	C711	ECKD1H103PF	0.01 50
C8	ECCD1H060CC	6P 50	C225	RCBS1H180JCY	18P 50	C712	EECF5R5U473	
C9	ECBT1H102KB	0.001 50	C226	ECKD1H103PF	0.01 50	C713	ECKD1H103PF	0.01 50
C10	RCBS1H3R3KCY	3.3P 50	C227	ECEA1CKS100	10 16	C714	ECEA0JS102	1000 6.3
C11	RCBS1H180JCY	18P 50	C251	ECKD1H223PF	0.022 50	C716	ECEA1VU330	33 35
C101	RCBS1H150JCY	15P 50	C252	ECEA1HK010	1 50	C717	ECKD2H102ZF	0.001 500
C102	RCBS1H150JCY	15P 50	C253	ECKD1H223PF	0.022 50	C719	ECEA1VU101	100 35
C103	ECBT1H102KB	0.001 50	C301	ECEA1CU101	100 16	C725	ECEA1VU101	100 35
C104	RCBS1H181KBY	180P 50	C302	ECEA1HKR47	0.47 50	C726	ECEA1VK330	33 35
C105	ECEA0JU101	100 6.3	C303	ECEA1HK010	1 50	C730 ⚠	ECKDKC103PF2	0.01 125
C106	ECKD1H103PF	0.01 50	C304	ECEA1VK3R3	3.3 35	C731	ECEA1HU330	33 50
C107	ECKD1H103PF	0.01 50	C305	ECEA1VK3R3	3.3 35	C912	ECKD1H103PF	0.01 50
C108	ECEA25M4R7	4.7 25	C306	ECEA1VK3R3	3.3 35	C913	ECEA1CKS100	10 16
C109	ECEA1CU330	33 16	C307	ECFTD332KXL	0.0033 25	C914	ECEA1HK010	1 50
C110	ECBT1H102KB	0.001 50	C308	ECFTD332KXL	0.0033 25	C915	ECEA1VK3R3	3.3 35
C201	ECKD1H103PF	0.01 50	C310	ECFTD473KXL	0.047 25	C917	RCBS1H5R6KLY	5.6P 50
C202	ECKD1H103PF	0.01 50	C311	ECQP1471JZ	470P 125	C921	RCBC1H101KBY	100P 50
C204	RCBC1H470JLY	47P 50	C312	ECKD1H103PF	0.01 50	C922	RCBC1H101KBY	100P 50
C205	ECKD1H223PF	0.022 50	C313	ECBT1H102KB	0.001 50	C924	RCBC1H101KBY	100P 50
C206	RCBS1H150JCY	15P 50	C314	ECBT1H102KB	0.001 50	C925	RCBC1H101KBY	100P 50
C208	ECEA0JU101	100 6.3	C316	ECEA1HKR47	0.47 50	C926	RCBC1H101KBY	100P 50
C209	ECEA1EK4R7	4.7 25	C321	ECEA1CKS100	10 16	C927	RCBC1H101KBY	100P 50
C210	ECKD1H223PF	0.022 50	C323	ECFTD332KXL	0.0033 25	C928	RCBC1H101KBY	100P 50
C211	ECKD1H223PF	0.022 50	C324	ECFTD332KXL	0.0033 25	C930	RCBC1H101KBY	100P 50
C212	ECKD1H223PF	0.022 50	C701	ECEA1CU222	2200 16	C942	ECBT1H102KB5	0.001 50
C213	RCBC1H101KBY	100P 50	C702	ECEA1CU102	1000 16	R111	ECKD1H103PF	0.01 50
C214	ECEA1CKS100	10 16	C704	ECBT1H102KB5	0.001 50	R112	ECKD1H103PF	0.01 50
C215	ECKD1H103PF	0.01 50	C705	ECEA1CU221	220 16	R326	ECKD1H103PF	0.01 50
C216	ECEA1HKR47	0.47 50	C706	ECEA1CKS100	10 16	R718	ECKD1H103PF	0.01 50
						R720	ECKD1H103PF	0.01 50
						R732	ECKD1H103PF	0.01 50

Printed in Japan
F880404350 YY/HK/IM

DEUTSCH

Tuner

ST-X990L

■ MESSUNGEN UND JUSTIERUNGEN

UKW JUSTIERUNGEN

Einstellungen der Bedienelemente und zu verwendende Geräte.

- UKW-Messender(UKW-MS)
- Stereo-Modulator
- Verzerrungs-Analystator
- Elektronische Gleichstrom-Voltmeter(EVM)
- Frequenzzähler
- Drosselspule(100µH)
- Widerstand(100kΩ)

Anmerkung: Für Z202,Z251,L321 und L322 werden bereits justierte Ersatzteile geliefert. Die Kerne dieser Teile daher nicht drehen.

UKW-MONO-VERZERRUNGS-JUSTIERUNG

1.Der Testaufbau ist in der Abbildung gezeigt.
2.Stellen Sie die Einheit auf "**FM(UKW)**" Betrieb.
3.Die Radiofrequenzanzeige und den Messender auf **100.10MHz** einstellen.
4.Den Kern von **T201** so justieren, daß die im Signalzustand gemessene Spannung **0mV (0±20mV)** im 300mV-Bereich beträgt.
5.**T202** so justieren, daß der Verzerrungsfaktor des linken Kanals minimal wird.
6.Schritte 4 und 5 einige Male wiederholen.
7.Versichern Sie sich, daß die Verzerrungsfaktoren von Kanal L und Kanal R annähernd gleich sind und auf ein Minimum gehalten sind.

Anmerkung:
Für die Justierung ist ein Schraubendreher aus Kunststoff zu verwenden.

ZUSTAND DES UKW-MESSENDERS
Modulation 100%
Modulationsfrequenz 1kHz
Ausgangspegel 66dB

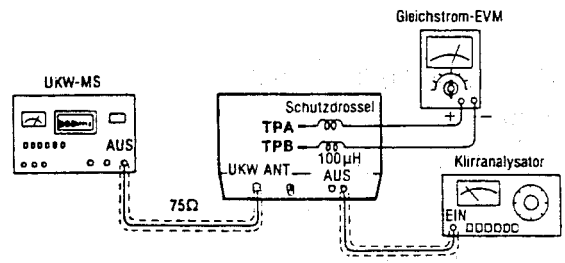

TPA = TP201 , TPB = TP202

MPX-SGO-JUSTIERUNG

1.Der Testaufbau ist in der Abbildung gezeigt.
2.Den UKW-Bertriebsart-Wahlshalter in die "**on/auto**"-Position stellen.
3.Radio und Meßsender auf **100.10MHz** einstellen.
4.**VR301** auf **19kHz ± 30Hz** auf der Frequenzzähleranzeige justieren.

● VERWENDUNG EINES ALTERNATIVSYSTEMS

1.Stereosignal vom Meßsender eingeben oder eine Stereo-Sendung empfangen.
2.**VR301** justieren, bis die Stereo-Anzeige aufleuchtet. Den Arm von **VR301** mit Lack sichern, wie in der Abbildung gezeigt.

ZUSTAND DES UKW-MESSENDERS
Modulation 100%
Modulationsfrequenz 0kHz
Ausgangspegel.....66dB

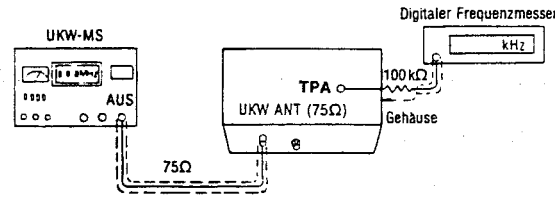

TPA = TP301

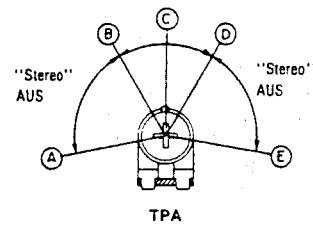

TPA

Ⓐ−Ⓑ,
Ⓓ−Ⓔ..... "Stereo" AUS Stellung
Ⓑ−Ⓓ..... "Stereo" EIN Stellung (Anzeigebeleuchtung)
Ⓒ..... Einstellpunkt des pilotschaltkreis'

TPA = VR301

ELNSTELLUNG DER PHASENSPERRUNG EINES SCHLEIFENVERSCHIUSSES

1.Der Testaufbau ist in der Abbildung gezeigt.
2.Den UKW-Bertriebsart-Wahlshalter in die "**AM**" Position stellen.
3.Drucken Sie den Prüfpunktnopf.
4.Stellen Sie den Radiofrequenzbildschirm auf "**1629kHz**".
5.**CT901** auf **524.288kHz± 10Hz** auf der Frequenzzähleranzeige justieren.

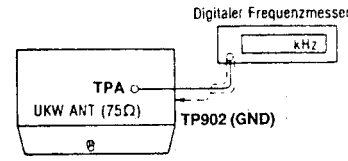

TPA = TP901

FRANÇAIS

■ MEAURAGES ET REGLAGES

M.F. REGLAGES

Positionnements des commandes et équipement utilisé

- Générateur de signaux M.F.(FG-SG)
- Modulateur stéréophonique
- Analyseur de distorsion
- Voltmètre électronique à C.C. (EVM).
- Compteur de fréquence
- Bobine d'amortissement d'arrêt (100µH)
- Résistance (100KΩ)

Nota: Pour Z202,Z251,L321 et L322 , ajuster les éléments qui sont fournis. Aussi, ne pas tourner les noyaux de ces éléments.

REGLAGE DE DISTORSION MONOPHONIQUE M.F.

1.Le raccordement de l'équipement d'essai est montré sur l'illustration.
2.Régler l'appareil sur le mode "**FM**".
3.Ajuster le réglage de l'affichage de radiofréquence et du générateur de signaux sur **100.10MHz**.
4.Régler le noyau de **T201** de telle sorte que la tension mesurée sur le mode de signaux soit de **0mV (0mV ± 20mV)** dans une plage de 300mV.
5.Ajuster **T202** de telle que le facteur de sistorsion du canal de gauche soit minimisé.
6.Répéter les étapes 4 et 5 quelques fois.
7.S'assurer que les facteurs de distorsion du canal de gauche et du canal de droite soient sensiblement les mêmes et au minimum.

Nota: Le tournevis de réglage utilisé devra être fait en résines.

CONDITION DU GENERATEUR DE SIGNAUX M.F.
Modulation 100%
Fréquenz de modulation 1kHz
Niveau de sortie.....66dB

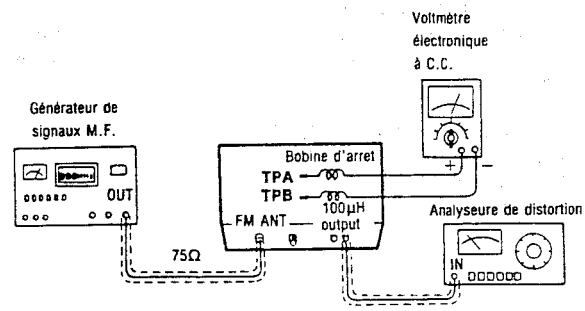

TPA = TP201 , TPB = TP202